


# au A1401K

## A Simple Manual (English Version)

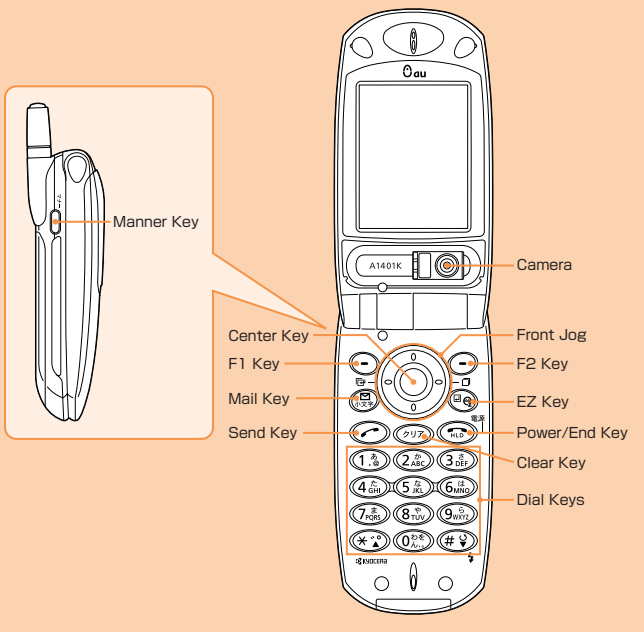

### Turning The A1401K On and Off

- Turning the A1401K On  
Press and hold **[Manner Key]** for more than one second.
- Turning the A1401K Off  
Press and hold **[Manner Key]** for approximately two seconds.

### Setting the Date and Time

You can set the phone to display the date and time on the stand-by screen. When this setting is enabled, the A1401K will receive current date and time information for the local service area, and the date and time will be updated accordingly.

From the stand-by screen: press **[F1]** ▶ press **[7.30]** ▶ press **[1.5]** ▶ press **[1.5]**.

### Checking Your Own Phone Number and E-mail Address

From the stand-by screen: press **[F1]** ▶ press **[0.96]** ▶ press **[F1]**.

### Making / Answering a Call

- Making a Call  
From the stand-by screen: enter the phone number you want to call ▶ press **[Call]**.  
To end the call: press **[End Call]**.

- Answering a Call  
Press **[Call]** while the phone is ringing.  
To adjust the earpiece volume during a call: press **[Volume Up]**.

### Storing an Entry in the Phone Book / Retrieving a Phone Book Entry

- Storing an Entry  
From the stand-by screen: press **[F1]** ▶ press **[F2]** ▶ press **[1.5]** ▶ select the item you want to store ▶ press **[Call]** ▶ enter the data ▶ press **[F1]**.
- Retrieving an Entry (Ex: To do "Name search")  
From the stand-by screen: press **[F1]** ▶ press **[F1]** ▶ press **[1.5]** ▶ enter the reading for your search ▶ press **[Call]** ▶ select a name ▶ press **[Call]**.

### Setting the E-mail and EZweb Default Settings

Before you can begin using the E-mail and EZweb services, you must set the default settings. When you set the default settings, your E-mail address will be registered, allowing you to send and receive E-mail as well as access the Internet.

From the stand-by screen: press **[E-mail]** or **[EZweb]** ▶ set the default settings ▶ press **[Call]**.

### Using E-mail and C-mail

- E-mail  
If you subscribed to the EZweb service when you purchased your phone, you will be able to use the E-mail service immediately. If you did not, please contact the au shop where you purchased your phone for further information. Make sure that you set the default settings before using the E-mail and EZweb services for the first time. (See "Setting the E-mail and EZweb Default Settings" above.)

#### ●Sending an E-mail Message

From the stand-by screen: press **[E-mail]** ▶ press **[1.5]** ▶ press **[Call]** to select the **[To]** input field ▶ press **[Call]** ▶ press **[Call]** to select the **[To]** input field ▶ press **[Call]** ▶ enter the recipient's address ▶ press **[Call]** ▶ press **[F1]** ▶ press **[Call]** to select the **[Subject]** input field ▶ press **[Call]** ▶ enter the subject ▶ press **[Call]** ▶ press **[Call]** to select the **[Message]** input field ▶ press **[Call]** ▶ enter your message ▶ press **[Call]** ▶ press **[F1]**.

#### ●Reading a Received E-mail Message

When you receive an E-mail message, "新着Eメール X件" (X New E-mail), where X represents the number of messages received, will be displayed on the stand-by screen.  
From the stand-by screen: press **[Call]** to select **[新着Eメール]** (New E-mail) ▶ press **[Call]** ▶ press **[Call]** to select **[メインフォルダ]** (Main folder) ▶ press **[Call]** ▶ press **[Call]** to select the E-mail message you want to read ▶ press **[Call]**.

- C-mail  
Subscribers in the Tokyo and Chubu – incorporating Aichi, Gifu, and Mie prefectures – metropolitan areas do not need to subscribe to use this service. For subscribers located outside of these areas, a separate subscription is required.

#### ●Sending a C-mail Message

From the stand-by screen: press and hold **[Call]** for more than one second ▶ press **[1.5]** ▶ press **[Call]** to select **[宛先未設定]** ▶ press **[Call]** ▶ enter the recipient's phone number ▶ press **[Call]** ▶ press **[Call]** to select **[メッセージ未設定]** ▶ press **[Call]** ▶ enter the message ▶ press **[Call]** ▶ press **[F1]**.

#### ●Reading a Received C-mail Message

When you receive an C-mail message, "新着Cメール X件" (X New C-mail), where X represents the number of messages received, will be displayed on the stand-by screen.  
From the stand-by screen: press **[Call]** to select **[新着Cメール]** (New C-mail) ▶ press **[Call]**.

### Using EZweb

EZweb is an information service that allows you to enjoy easy Internet access from your mobile phone.

If you subscribed to the EZweb service when you purchased your phone, you will be able to use the EZweb service immediately. If you did not, please contact the au shop where you purchased your phone for further information. Make sure that you set the default settings before using the E-mail and EZweb services for the first time. (See "Setting the E-mail and EZweb Default Settings" above.)

From the stand-by screen: press **[EZweb]** ▶ press **[1.5]** ▶ select the website you want to view.

### Using the Camera (Movie Clips/Photos)

#### ●Recording a Movie Clip

To record a movie clip: turn the camera either outward or inward ▶ press **[Call]** to start recording the movie clip ▶ press **[Call]** to stop recording ▶ press **[Call]** again.

If you took a photo the last time you used the camera, Photo mode will be enabled when you turn the camera either outward or inward. In this case, press **[F1]**.

#### ●Taking a Photo

To take a photo: turn the camera either outward or inward ▶ press **[Call]** to take the photo ▶ press **[Call]** again.

If you recorded a movie clip the last time you used the camera, Movie mode will be enabled when you turn the camera either outward or inward. In this case, press **[F1]**.

### Making an International Call

Ex: To call 212-123-△△△△ in the USA

**[0.96]** **[0.96]** **[5.5]** **[3.3]** **[4.5]** **[5.5]** **[1.5]** **[2.96]** **[1.5]** **[2.96]** **[1.5]** **[2.96]** **[3.3]** **[△△△△]** ▶ Press **[Call]**

↑ International access code      ↑ Area code (USA)      ↑ Phone number you want to call

### English Announcement Function

This function allows you to set the phone so that Voice Mail Service operation instructions and answering messages are played in English.

From the stand-by screen: press **[Call]** ▶ press **[8.96]** ▶ press **[1.5]** ▶ press **[6.96]** ▶ press **[Call]**.

### Other Handy Features

#### ●Manner Mode

From the stand-by screen: press and hold **[Manner Key]** for more than one second.

To disable Manner mode, press and hold **[Manner Key]** for more than one second from the stand-by screen.

#### ●Setting the Voice Record Function

From the stand-by screen: press and hold **[F2]** for more than one second.

To disable the Voice Record function, press and hold **[F2]** for more than one second from the stand-by screen.

### For inquiries, please contact

au Customer Service Center (General Information)

- If you are calling from a landline phone: ☎ 0077-7-111 (toll free)
- If you are calling from an au mobile phone: 157 (toll free)