 


A5401CA A Simple Manual (English version)

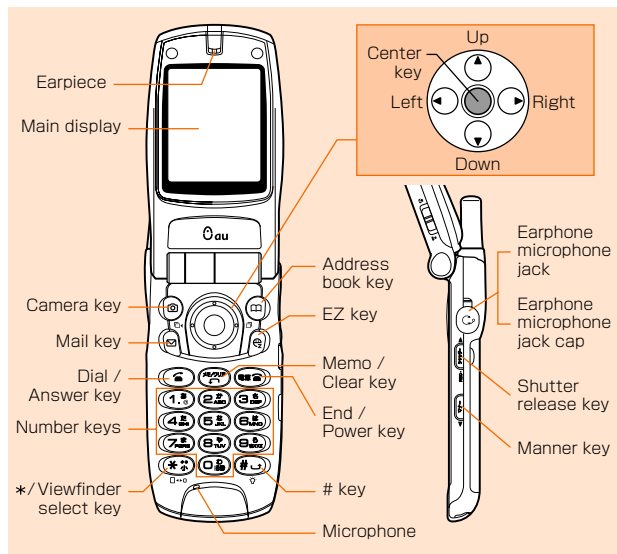

Turning the Phone On and Off

Hold down **[Power]** for a few seconds.
To turn off the phone, hold down **[Power]** for about one second.

Setting the Date and Time

From the standby screen, press **[Menu]** **[2]** **[1.3]**, and then **[1.3]**.

Checking Your Own Phone Number and E-mail Address

 
From the standby screen, press **[OK]** and then **[Menu]**.

Placing a Call to a Landline Phone

Example: To dial the Tokyo (area code 03) number 1234-XXXX.




Placing a Call to a Cell Phone or PHS Phone

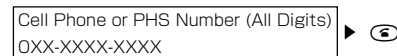

To correct an input mistake
· Press **[Clear]** to clear the last digit you input.
· Hold down **[Clear]** for about one second to clear all the digits you input.

Placing an International Call (au International Phone Service)

 Example: To dial the U.S. number 212-123-XXXX.

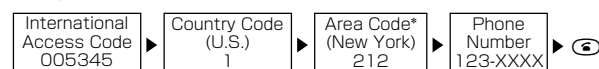

* When placing an international call to a number whose area code starts with "0," skip the "0" when dialing.

Answering a Call

When the status light is flashing to indicate an incoming call, press **[Call]**, **[End/Power]**, **[Call]**, **[Call]**, **[Call]**, any number key from **[0]** to **[9]**, **[*]**, or **[#]**.

Using the Address Book

Creating an Address Book Record

- From standby, **[Call]** (Hold down for more than one second.)
- Input the name, phone number, e-mail address, and other information. (for each item **[Left]**) **[Call]** (登録)
- To change the character type while inputting data, press **[Text]**. When the character type list is on the display, select **[AaBb]** to input half-size English characters or **[AaBb]** to input full-size English characters.

Placing a Call Using the Address Book

- From standby, **[Call]** **[2]** to select the address book. **[Call]** (選択)
- [Call]** to select the phone number. **[Call]**

Initializing E-mail and EZweb Settings

[Call] or **[Call]** → "EZwebを利用するための初期設定を行います..." screen. **[OK]** → change from "ただいま初期設定を行っております..." to "ようこそEZwebへ お客様のEメールアドレスは..." **[OK]**

E-mail

Be sure to initialize e-mail settings before trying to send or receive e-mail.

Writing and Sending an E-mail Message

- From standby, **[Call]** **[2]** **[1.3]** **[Call]** to select "宛先" (編集) **[Call]** (編集)
- Input e-mail address. **[OK]** **[Call]** (確定) **[Call]** (件名)
- Input subject. **[OK]** **[Call]** to select "本文" (編集)
- Input body text. **[OK]** **[Call]** (送信) or **[Call]**

Picking Up E-mail

- When the new receipt list appears on the standby screen, use **[Call]** to select e-mail. **[Call]** (OK) **[Call]** (OK) **[Call]** to select e-mail. **[Call]** (表示)

C-mail

Writing and Sending a C-mail Message

- From standby, **[Call]** (Hold down for more than one second.) **[1.3]**
- Input message text. **[Call]** **[1.3]** **[Call]** **[Call]** **[Call]** Input the addressee's phone number.
- [Call]** (OK) **[Call]** (送信) or **[Call]**

Picking Up C-mail

- When the new receipt list appears on the standby screen **[Call]** to select C-mail. **[Call]** (OK) **[Call]** (表示)

EZweb

You can use au EZweb to access the Internet. Be sure to initialize settings before trying to use EZweb.

- From standby, **[Call]** **[2]** **[1.3]** **[Call]** to select and use an information site.

Camera

Shooting and Saving a Photo

- From standby, **[Call]** or **[Call]** (Hold down for more than one second.)
- [Call]** (シャッター) or **[Call]** **[Call]** **[Call]** (保存)
- * **[Call]** (ムービー) switches to movie.

Shooting and Saving a Movie

- From standby, **[Call]** (Hold down for more than one second.)
- [Call]** (録画) or **[Call]** **[Call]** **[Call]** (終了) or **[Call]** **[Call]** **[Call]** (保存)
- * **[Call]** (フォト) switches to photo.

Selecting Foreign Language (English) for Automatic Answering Service

The answering service is a service that plays an "answering service" message and asks the caller to leave a message when the phone is turned off, when the phone is in location where it cannot receive a signal, and when the phone does not answer a call after a preset amount of time has passed.

The answering service is available to users with service subscriptions in the following locations: Tokyo, Kanagawa, Chiba, Saitama, Ibaraki, Tochigi, Gunma, Yamanashi, Niigata, Aichi, Gifu, Mie, Shizuoka, Nagano. If your subscription is outside the above areas, you need to apply separately for the answering service. For details, call one of the phone numbers provided under "For More Information" below.

You can change the language of the operation guidance and answer message of the answering service to a foreign language (English).

- From standby, **[Call]** **[Call]** **[Call]** or **[Call]** **[Call]** **[Call]** **[Call]** → foreign language (English) guidance change announced in English. **[Call]**

Changing from Foreign Language (English) Guidance to Japanese Language Guidance

- From standby, **[Call]** **[Call]** **[Call]** or **[Call]** **[Call]** **[Call]** **[Call]** → Japanese language guidance change announced in Japanese. **[Call]**

Manner Mode

Turning on the Manner Mode disables the paging tone.

Turning the Manner Mode On and Off

From standby, **[Call]** (Hold down for more than one second.)
This sets Manner 1 (SV). The vibrator works without sounding the paging tone. Pressing **[Call]** (Hold down for more than one second.) again from standby turns off the Manner Mode.

Dengon Memo

When Dengon Memo is turned on, the phone automatically plays an answering message when an incoming call is received, and allows the caller to record a message.

Turning Dengon Memo On and Off

From Standby, **[Call]** (Hold down for more than one second.)
Pressing **[Call]** (Hold down for more than one second.) again from standby turns off Dengon Memo.

* A Dengon Memo recording can be up to 15 seconds long. You can have up to four Dengon Memo messages in memory.

Playing Back a Recorded Dengon Memo

- When the new receipt list appears on the standby screen **[Call]** to select "伝言あり". **[Call]** (OK)
- Or, **[Call]** from standby, **[Call]** **[Call]** **[Call]** **[Call]** to select a Dengon Memo for playback. **[Call]** (再生)

Deleting a Recorded Dengon Memo

- From standby, **[Call]** **[Call]** **[Call]** **[Call]** to select a Dengon Memo for deletion. **[Call]** (サブメニュー) **[Call]** **[Call]**

For More Information

General Information

From landline phones **[Call]** 0077-7-111 (toll free)
From au phones 157 (toll free, no area code needed)