


A5403CA

A Simple Manual (English Version)

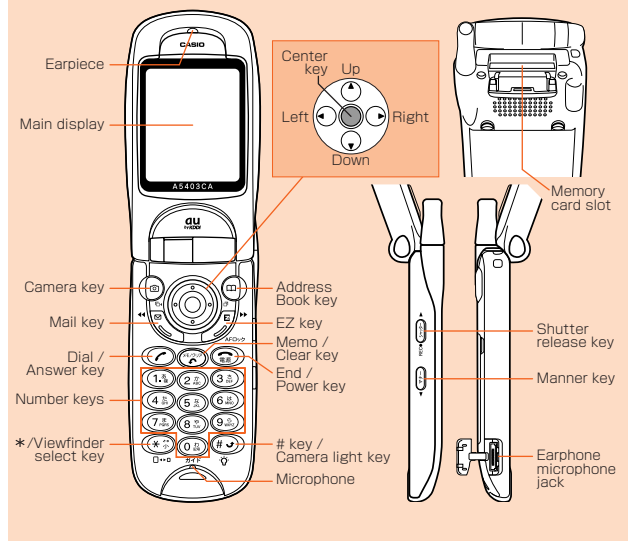

Turning Power On and Off

- Turning power on
Hold down **[Power]** for a few seconds.
- Turning power off
Hold down **[Power]** for at least one second.

Enabling Auto Date and Time Setting

When auto date and time setting is enabled, the phone will receive current information for your local service area, and update its date and time settings accordingly.

From the stand-by screen: Press **[OK]**. ▶ Press **[7.5]**. ▶ Press **[1.5]**. ▶ Press **[1.5]**.

Checking Your Own Phone Number and E-mail Address

From the stand-by screen: Press **[OK]**. ▶ Press **[0.5]**.

Placing and Answering a Call

- Placing a Call
From the stand-by screen: Enter the phone number you want to call. ▶ Press **[Call]**.
To end a call: Press **[End]**.
- Answering a Call
When the phone starts ringing, press **[Call]**.
To adjust the earpiece volume during a call: Use **[Volume]**.

Storing and Recalling an Address Book Data

- Storing Data
From the stand-by screen: Hold down **[Call]** for at least one second. ▶ Use **[Call]** to select the Address Book record you want to edit. ▶ Press **[Edit]**. ▶ Enter the data. ▶ Press **[Store]**.
- Recalling Data
From the stand-by screen: Press **[Call]** to display the Hiragana Row Search

screen. ▶ Use **[Call]** to select the hiragana row for the record you want. ▶ Use **[Call]** to select the name of the record. ▶ Press **[Display]** to display the Address Book record screen.

Configuring E-mail and EZweb Default Settings

You must configure default settings before you can use the E-mail and EZweb services. Configuring default settings will register your e-mail address, which will make it possible for you to send and receive e-mail, and to access the Internet with your phone.

From the stand-by screen: Press **[Call]** or **[Call]**. ▶ Press **[OK]**. ▶ Configure default settings. ▶ Press **[OK]**.

Using E-mail and C-mail

●E-mail

If you subscribed to EZweb service when you purchased your A5403CA, you will be able to use the E-mail service immediately. If you did not, please contact the au shop where you purchased your phone for further information. Make sure that you configure default settings before trying to use the E-mail and EZweb services for the first time. (See "Configuring E-mail and EZweb Default Settings" above.)

• Sending an E-mail Message

From the stand-by screen: Press **[Call]**. ▶ Press **[1.5]** [新規作成] (New). ▶ Use **[Call]** to select the [宛先] (Addressee) field. ▶ Press **[Edit]**. ▶ Use **[Call]** to select the [宛先入力メニュー] (Addressee input menu) item. ▶ Press **[OK]**. ▶ Enter the mail address. ▶ Press **[OK]**. ▶ Use **[Call]** to select the [件名] (Subject) field. ▶ Press **[Edit]**. ▶ Enter the subject. ▶ Press **[OK]**. ▶ Use **[Call]** to select the [本文] (Body) field. ▶ Press **[Edit]**. ▶ Enter the message text. ▶ Press **[OK]**. ▶ Press **[送信]** (Send) or **[Call]**.

• Reading a Received E-mail Message

"[Eメール X件] (X New E-Mail Messages) appears on the stand-by screen to let you know you have e-mail. "X" represents a value that indicates the number of e-mail messages you have waiting.
From the stand-by screen: Use **[Call]** to select [Eメール X件] (X New E-Mail Messages). ▶ Press **[OK]**. ▶ Use **[Call]** to select [メインフォルダ] (Main folder). ▶ Press **[OK]**. ▶ Use **[Call]** to select the e-mail message you want to read. ▶ Press **[表示]** (Display).

●C-mail

Subscribers outside of Tokyo, Kanagawa, Chiba, Saitama, Ibaraki, Tochigi, Gunma, Yamanashi, Niigata, Aichi, Gifu, Mie, Shizuoka, and Nagano need to apply separately to subscribe to C-mail.

• Sending a C-mail Message

From the stand-by screen: Hold down **[Call]** for at least one second. ▶ Press **[1.5]** [新規作成] (New). ▶ Enter the message text. ▶ Press **[OK]**. ▶ Press **[1.5]**. ▶ Use **[Call]** to select [宛先選択] (Addressee) item. ▶ Press **[OK]**. ▶ Enter the addressee's phone number. ▶ Press **[OK]**. ▶ Press **[送信]** (Send) or **[Call]**.

• Reading a Received C-mail Message

"[Cメール X件] (X New C-Mail Messages) appears on the stand-by screen to let you know you have C-mail. "X" represents a value that indicates the number of C-mail messages you have waiting.
From the stand-by screen: Use **[Call]** to select [Cメール X件] (X New C-Mail Messages). ▶ Press **[OK]**. ▶ Use **[Call]** to select the C-mail message you want to read. ▶ Press **[表示]** (Display).

Using EZweb

EZweb is an information service that allows easy Internet access from your au mobile phone. You can use this service anywhere your phone can pick up the service signal. A separate subscription, available at an additional charge, is required to use EZweb. If you did not subscribe to EZweb when you

purchased your A5403CA, please contact the au shop where you purchased your phone or contact customer service by phone.

If you subscribed to EZweb when you purchased your phone, you will be able to use the EZweb service immediately. Make sure that you configure default settings before using E-mail and EZweb for the first time. (See "Configuring E-mail and EZweb Default Settings".)

From the stand-by screen: Press **[Call]**. ▶ Press **[1.5]** [トップメニュー] (Top Menu). ▶ Use **[Call]** to select the website you want to view.

Using the Camera (Movie and Snapshot)

●Recording a Movie Clip

From the stand-by screen: Hold down **[Call]** for at least one second. ▶ Press **[録画]** (Record) or **[Call]** to start recording. ▶ Press **[終了]** (End). ▶ Press **[保存]** (Store) to store the movie.
Pressing **[Pause]** or **[Call]** during recording pauses recording.
Pressing **[フォト]** (Photo) in the Movie mode changes to the Photo mode.

If the phone is folded

From the stand-by screen: Hold down **[Call]** for at least one second. ▶ Press **[ムービー]** (Movie). ▶ Press **[Call]** to start recording. ▶ Press **[一時停止]** (Pause) and then **[終了]** (End) to stop recording. ▶ Press **[保存]** (Store) to store the movie.
Pressing **[Call]** during recording cancels recording.

●Taking a Snapshot

 
From the stand-by screen: Press **[シャッター]** (or hold down **[Call]** for at least one second). ▶ Press **[シャッター]** (Shutter) or **[Call]** (Shutter) to record a snapshot. ▶ Press **[保存]** (Store) to store the photo.
Pressing **[ムービー]** (Movie) in the Photo mode changes to the Movie mode.

If the phone is folded

From the stand-by screen: Hold down **[Call]** for at least one second. ▶ Press **[撮影]** (Record) to record a snapshot. ▶ Press **[保存]** (Store) to store the photo.

Making an International Call

Ex: To call 212-123-△△△△ in the USA



English Voice Mail Answering Messages

You can configure Voice Mail to play operation instructions and answering messages in English.

From the stand-by screen: Press **[OK]**. ▶ Press **[8.5]**. ▶ Press **[1.5]**. ▶ Press **[6.5]**. ▶ Press **[Call]**.

Other Handy Features

●Manner Mode

From the stand-by screen: Hold down **[Call]** for at least one second. Repeat the above operation to disable the Manner mode.

●Take A Message Feature (Voice Recording)

From the stand-by screen: Hold down **[Call]** for at least one second. Repeat the above operation to disable the Take A Message feature.

For inquiries, please contact

au Customer Service Center (General Information)

- If you are calling from a landline phone: ☎ 0077-7-111 (toll free)
- If you are calling from an au mobile phone: 157 (toll free)