


English Simple Manual (簡易英語版)

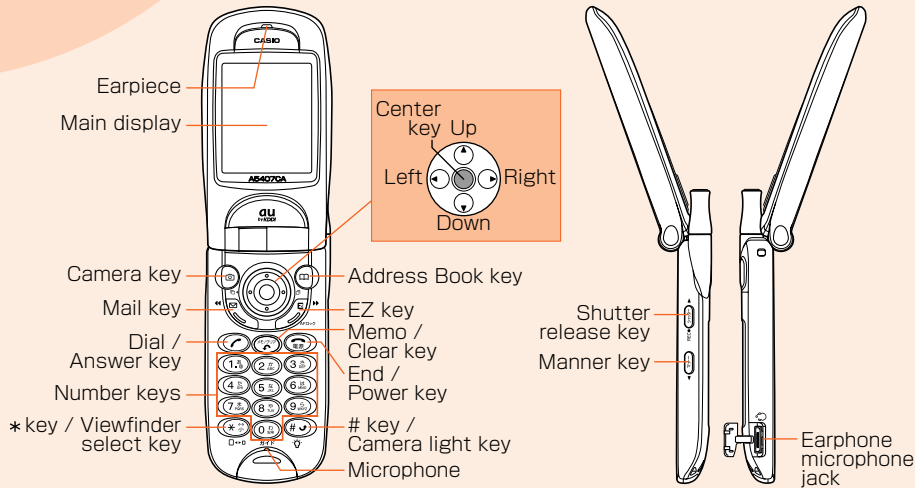

Turning Power On and Off

- Turning power on: Hold down **[Power]** for a few seconds.
- Turning power off: Hold down **[Power]** for at least one second.

Applying the Phone's Default Settings

From the stand-by screen: Press **[Menu]**. ▶ Press **[3.0]**.

Checking Your Own Phone Number

From the stand-by screen: Press **[Menu]**. ▶ Press **[0.0]**.

Placing and Answering a Call

- Placing a Call
 - From the stand-by screen: Enter the phone number you want to call.
 - ▶ Press **[Call]**.
 - To end a call: Press **[End]**.
- Answering a Call
 - When the phone starts ringing, press **[Call]**.
 - To adjust the earpiece volume during a call: Use **[Volume]**.

Storing and Recalling an Address Book Data

- Storing Data
 - From the stand-by screen: Hold down **[Menu]** for at least one second.
 - ▶ Use **[Up]** to select the Address Book record you want to edit. ▶ Press **[Edit]** (編集).
 - ▶ Enter the data. ▶ Press **[Store]** (登録).
- Recalling Data
 - From the stand-by screen: Press **[Menu]** to display the Hiragana Row Search screen.
 - ▶ Use **[Up]** to select the hiragana row for the record you want.
 - ▶ Use **[Down]** to select the name of the record.
 - ▶ Press **[Display]** (表示) to display the Address Book record screen.

Using the Camera (Movie and Snapshot)

- Recording a Movie Clip
 - From the stand-by screen: Hold down **[Movie]** for at least one second.
 - ▶ Press **[Record]** (録画) or **[Movie]** to start recording. ▶ Press **[End]** (終了).
 - ▶ Press **[Store]** (保存) to store the movie.
 - Pressing **[Pause]** (一時停止) during recording pauses recording.
 - Pressing **[Photo]** (フォト) in the Movie mode changes to the Photo mode.

If the phone is folded

- From the stand-by screen: Hold down **[Movie]** for at least one second.
- ▶ Press **[Movie]** (ムービー) (Movie). ▶ Press **[Movie]** to start recording.
- ▶ Press **[Pause]** (一時停止) (Pause) and then **[End]** (終了) (End) to stop recording.
- ▶ Press **[Store]** (保存) (Store) to store the movie.
- Pressing **[Cancel]** (キャンセル) during recording cancels recording.

● Taking a Snapshot

 
- From the stand-by screen: Press **[Shutter]** (or hold down **[Movie]** for at least one second).
- ▶ Press **[Shutter]** (シャッター) (Shutter) or **[Shutter]** (Shutter) to record a snapshot.
- ▶ Press **[Store]** (保存) (Store) to store the photo.
- Pressing **[Movie]** (ムービー) (Movie) in the Photo mode changes to the Movie mode.

If the phone is folded

- From the stand-by screen: Hold down **[Movie]** for at least one second.
- ▶ Press **[Record]** (撮影) (Record) to record a snapshot.
- ▶ Press **[Store]** (保存) (Store) to store the photo.

Making an International Call

Ex: To call 212-123-△△△△ in the USA



English Voice Mail Answering Messages

You can configure Voice Mail to play operation instructions and answering messages in English.
From the stand-by screen: Press **[Menu]**. ▶ Press **[8.0]**. ▶ Press **[1.0]**. ▶ Press **[6.0]**. ▶ Press **[Call]**.

Other Handy Features

- Manner Mode
 - From the stand-by screen: Hold down **[Manner]** for at least one second.
 - Repeat the above operation to disable the Manner mode.
- Take A Message Feature (Voice Recording)
 - From the stand-by screen: Hold down **[Message]** for at least one second.
 - Repeat the above operation to disable the Take A Message feature.

For inquiries, please contact

- au Customer Service Center (General Information)
 - If you are calling from a landline phone: **[Phone]** 0077-7-111 (toll free)
 - If you are calling from an au mobile phone: 157 (toll free)