


English Simple Manual

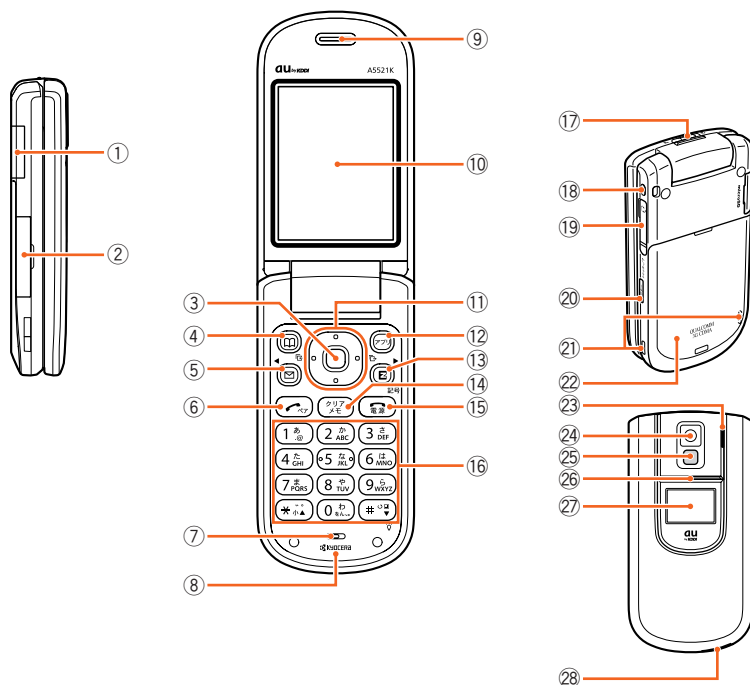

Nomenclature

- | | |
|------------------------------|------------------------------|
| ① microSD card slot | ⑩ Main display |
| ② External connection jack | ⑪ Jog key |
| ③ Center key | ⑫ Application Key |
| ④ Address Book key | ⑬ EZ key |
| ⑤ Mail key | ⑭ Clear/Memo key |
| ⑥ Send key | ⑮ Power/End key |
| ⑦ Microphone | ⑯ Number keypad |
| ⑧ Antenna (built-in) | ⑰ Macro mode selector switch |
| ⑨ Earpiece | ⑱ Strap mount |
| ⑪ Jog key | ⑲ Earphone microphone jack |
| ⑫ Application Key | ⑳ Manner/Shutter/? key |
| ⑬ EZ key | ㉑ Charging terminals |
| ⑭ Clear/Memo key | ㉒ Battery pack cover |
| ⑮ Power/End key | ㉓ Speaker |
| ⑯ Number keypad | ㉔ Camera (lens) |
| ⑰ Macro mode selector switch | ㉕ Shooting light |
| ⑱ Strap mount | ㉖ Call alert lamp |
| ⑲ Earphone microphone jack | ㉗ Sub-display |
| ⑳ Manner/Shutter/? key | ㉘ Infrared port |
| ㉑ Charging terminals | |
| ㉒ Battery pack cover | |
| ㉓ Speaker | |
| ㉔ Camera (lens) | |
| ㉕ Shooting light | |
| ㉖ Call alert lamp | |
| ㉗ Sub-display | |
| ㉘ Infrared port | |

Turning the Power On and Off

- Turning the power on
Hold down (電源) for at least one second.
- Turning the power off
Hold down (電源) for at least two seconds.

Applying the EZweb Default Settings

To send and receive e-mails or use EZweb, you must first subscribe to EZweb. You should also apply the default settings before sending and receiving e-mails or using EZweb. Applying the default settings automatically sets your e-mail address.

From the stand-by screen: Press (メール). → Press (OK) [OK] (to begin applying the default settings). → Press (OK) [OK] .

Checking Your Own Phone Number/E-mail Address

From the stand-by screen: Press (電話). → Press (0, 区) (displays your own phone number and e-mail address in the profile).

Making and Answering a Call

- Making a call
From the stand-by screen: Enter the phone number you want to call. → Press (電話).
To end the call: Press (電話).
- Answering a call
When the phone rings, press (電話).
To end the call: Press (電話).
To adjust the earpiece volume: Press (音量).

Storing and Recalling Address Book Entries

- Storing an entry
From the stand-by screen: Press (電話). → Press (メニュー) [メニュー] (Menu), select 「新規登録」 (Add new) and press (選択) [選択] (Select). → Select the item to be stored and press (編集) [編集] (Edit). → Enter the data and press (OK) [OK] . → Check the details and press (完了) [完了] (End).
- Recalling an entry
From the stand-by screen: Press (電話). → Press (左右) to select the hiragana row for the desired entry (あかさたな...). → Press (上下) to select the desired name. → Press (電話).

Sending and Receiving (Reading) E-mails

- Sending an e-mail
From the stand-by screen: Press (メール). → Select 「新規作成」(New) and press (選択) [選択] . → Enter the recipient's e-mail address, the subject and the message by following the on-screen instructions. → Press (送信) [送信] (Send). → Press (送信) [送信] (Send).
- Receiving (reading) e-mails
When you receive e-mails, the phone emits the incoming e-mail tone and displays the new e-mail message 「新着Eメール△件」 (You have △ new e-mails) on the stand-by screen.
Select 「新着Eメール」 (New) and press (確認) [確認] (Check). → Select the folder and press (選択) [選択] . → Select the e-mail you want to read and press (表示) [表示] (Display).

Using the Camera (Photos and Movies)

● Taking a photo

From the stand-by screen: Press . → Select 「カメラ」 (Camera) and press 【選択】 (Select). → Select 「フォト」 (Photo) and press 【選択】 (Select)*1. → Press 【撮影】 (Shoot). → Press 【保存】 (Store).

● Recording a movie

From the stand-by screen: Press . → Select 「カメラ」 (Camera) and press 【選択】 (Select). → Select 「ムービー」 (Movie) and press 【選択】 (Select)*1. → Press 【録画】 (Record). → Press 【終了】 (End). → Press 【保存】 (Store)*2.

*1: To change the mode, press .

*2: If the movie mode is 「長時間L」 (Long), the movie is automatically saved when recording ends.

Making an International Call

E.g.: To call 212-123-△△△△ in the USA

005345 → 1 → 212 → 123→△△△△ →

International access code

Country code(USA)

Area code

Number you want to call

Other Handy Features

● Manner Mode

From the stand-by screen: Hold down for at least one second.

To disable Manner mode, repeat the above step.

● Take a Message

- Setup

From the stand-by screen: Hold down for at least one second.

To disable Take a Message, repeat the above step.

- Playback

From the stand-by screen: Press . → Select 「簡易留守メモ」 (Answer Phone) and press 【選択】 (Select) → Select 「メモ再生」 (Play message) and press 【選択】 (Select). → Select the message you want to listen to and press 【再生】 (Play).

For inquiries, please contact

au Customer Service Center (General Information)

- If you are calling from a landline phone: ☎ 0077-7-111 (toll free)
- If you are calling from an au mobile phone: 157 (toll free)