 


# A5526K

## English Simple Manual (簡易英語版)



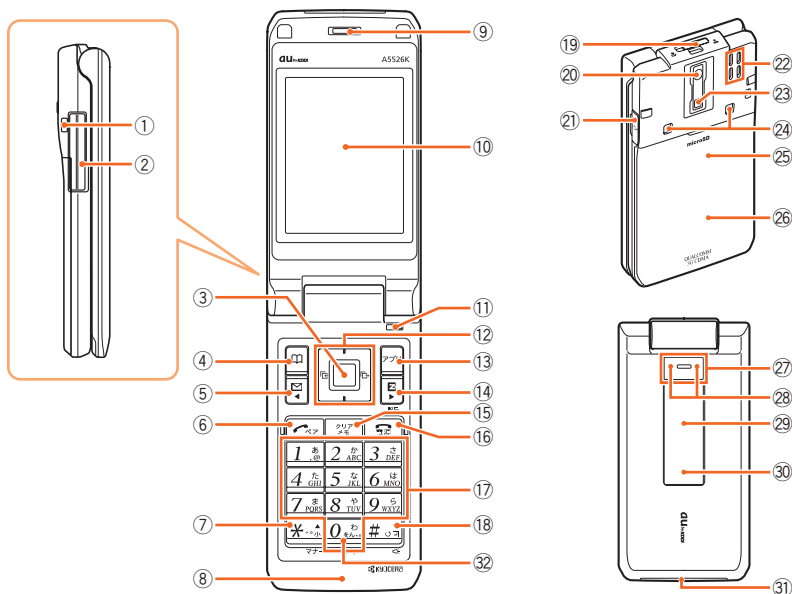

### Nomenclature

- |                            |   |
|----------------------------|---|
| ① Strap mount              | ⑱ # key   |
| ② External connection jack | ⑲ Macro mode selector switch                    |
| ③ Center key               | ⑳ Camera (lens)                                 |
| ④ Address key              | ㉑ Earphone jack                                 |
| ⑤ Mail key                 | ㉒ Speaker                                       |
| ⑥ Send key                 | ㉓ Shooting light/Simple light                   |
| ⑦ * /Manner key            | ㉔ Charging terminals                            |
| ⑧ Antenna (built-in)       | ㉕ microSD card socket (built-in)                |
| ⑨ Earphone                 | ㉖ Battery pack cover (battery pack compartment) |
| ⑩ Main Display             | ㉗ Information key                               |
| ⑪ Microphone               | ㉘ Incoming indicator                            |
| ⑫ Jog key                  | ㉙ Sub-display                                   |
| ⑬ Application key          | ㉚ Charging indicator                            |
| ⑭ EZ key                   | ㉛ Infrared port                                 |
| ⑮ Clear/Memo key           | ㉜ Safety Buzzer                                 |
| ⑯ Power/End key            |   |
| ⑰ Number keypad            |   |

## ■ English Simple Manual (簡易英語版)

### Turning the Power On and Off

- Turning the power on  
Hold down  for at least one second.
- Turning the power off  
Hold down  for at least two seconds.

### Applying the EZweb Default Settings






To send and receive e-mail or use EZweb, you must first subscribe to EZweb. You should also apply the default settings before sending and receiving e-mail or using EZweb. Applying the default settings automatically sets your e-mail address.

**From the stand-by screen:** Press . → Press  [OK] (to begin applying the default settings). → Press  [OK] .



 






### Checking Your Own Phone Number/E-mail Address

**From the stand-by screen:** Press . → Press  (displays your own phone number and e-mail address in the profile).







### Making and Answering a Call

- Making a call  
**From the stand-by screen:** Enter the phone number you want to call. → Press .  
**To end the call:** Press .
- Answering a call  
**When the phone rings, press** .  
**To end the call:** Press .  
**To adjust the earpiece volume:** Press .






### Storing and Recalling Address Book Entries

- Storing an entry  
**From the stand-by screen:** Press . → Press  [メニュー] (Menu), select 「新規登録」 (Add new) and press  [選択] (Select). → Select the item to be stored and press  [編集] (Edit). → Enter the data and press  [OK] . → Check the details and press  [完了] (End).
- Recalling an entry  
**From the stand-by screen:** Press . → Press  to select the desired name. → Press .

### Sending and Receiving (Reading) E-mails

 
- Sending an e-mail  
**From the stand-by screen:** Press . → Select 「新規作成」(New) and press  [選択] (Select). → Enter the recipient's e-mail address, the subject and the message by following the on-screen instructions. → Press  [送信] (Send).
- Receiving (reading) e-mail  
**When you receive e-mail, the phone emits the incoming e-mail tone and displays the new e-mail message 「新着Eメール△件」** (You have △ new e-mails) on the stand-by screen.  
**Select 「新着Eメール」 (New) and press**  [確認] (Check). → Select the folder and press  [選択] (Select). → Select the e-mail you want to read and press  [表示] (Display).

### Using the Camera (Photos)

**From the stand-by screen:** Press . → Select 「カメラ」 (Camera) and press  [選択] (Select). → Select 「フォト」 (Photo) and press  [選択] (Select). → Press  [撮影] (Shoot). → Press  [保存] (Store).

## Making an International Call

E.g.: To call 212-123-△△△△ in the USA



## Other Handy Features

### ● Manner Mode

**From the stand-by screen: Hold down for at least one second.**  
To disable Manner mode, repeat the above step.

### ● Take a Message

#### • Setup

**From the stand-by screen: Hold down for at least one second.**  
To disable Take a Message, repeat the above step.

#### • Playback

**From the stand-by screen: Press , → Select 「簡易留守メモ」 (Answer Phone) and press 【選択】 (Select) → Select 「メモ再生」 (Play message) and press 【選択】 (Select). → Select the message you want to listen to and press 【再生】 (Play).**

### For inquiries, please contact

au Customer Service Center (General Information)

- If you are calling from a landline phone: ☎0077-7-111 (toll free)
- If you are calling from an au mobile phone: 157 (toll free)