




English Simple Manual (簡易英語版)

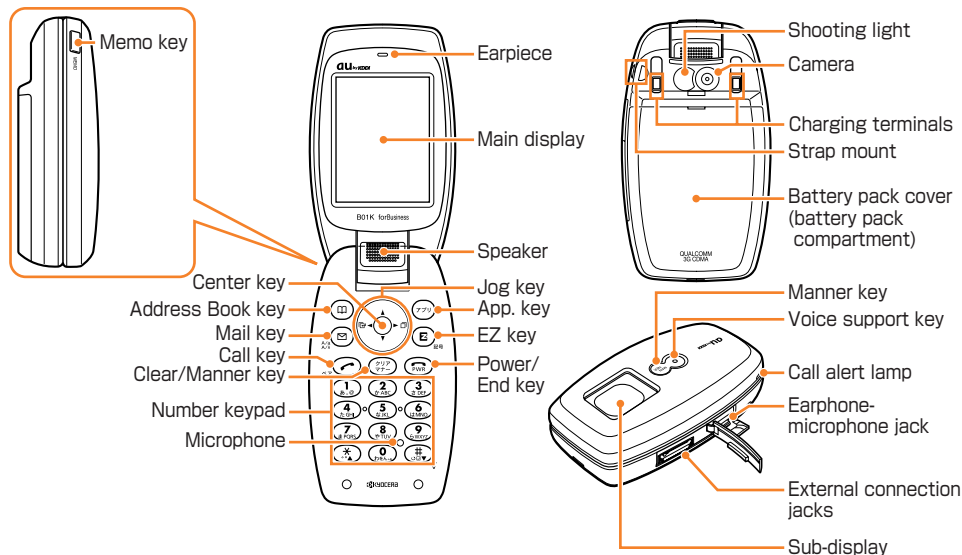

Turning the Power On and Off

- Turning the power on
Hold down  for at least one second.
- Turning the power off
Hold down  for at least two seconds.

Applying the EZweb Default Settings

To send and receive e-mails or use EZweb, you must first subscribe to EZweb. You should also apply the default settings before sending and receiving e-mails or using EZweb. Applying the default settings automatically sets your e-mail address.

From the stand-by screen: Press  or . → Press  [OK] (to begin applying the default settings). → Press  [OK].

Checking Your Own Phone Number/E-mail Address

From the stand-by screen: Press . → Select 「私の番号」 (My number) and then press  【選択】 (Select).



Placing and Answering a Call

- Placing a call
From the stand-by screen: Enter the phone number you want to call. → Press .
To end the call: Press .
- Answering a call
When the phone rings, press .
To end the call: Press .
- To adjust the earpiece volume: Press .



Storing and Recalling Address Book Entries

- Storing an entry
From the stand-by screen: Press . → Press 【メニュー】 (Menu), select 「新規登録」 (Add new) and press 【選択】 (Select). → Press 【入力】 (Enter). → Enter the data by following the on-screen instructions. → Check the details and press 【完了】 (End). → Select 「YES」 and press 【OK】.
- Recalling an entry
From the stand-by screen: Press . → Press to select the hiragana row for the desired entry (あかさたな・・・). → Press to select the desired name. → Press .



Sending and Receiving (Reading) E-mails

- Sending an e-mail
From the stand-by screen: Press . → Select 「新規作成」 (New) and press 【OK】. → Enter the recipient's e-mail address, the subject and the message by following the on-screen instructions. → Press 【送信】 (Send).
- Receiving (reading) e-mails
When you receive e-mails, the phone emits the incoming e-mail tone and displays the new e-mail message 「新着Eメール△件」 (You have △ new e-mails) on the stand-by screen.
Select 「新着Eメール」 (New) and press 【確認】 (Check). → Select the e-mail you want to read and press 【表示】 (Display).



Using the Camera (Photos and Movies)

- Taking a photo

From the stand-by screen: Press . → Select 「カメラ」 (Camera) and press 【選択】 (Select). → Select 「フォト」 (Photo) and press 【選択】 (Select). → (Press 【撮影】 (Shoot). → Press 【保存】 (Store).

 
- Recording a movie

From the stand-by screen: Press . → Select 「カメラ」 (Camera) and press 【選択】 (Select). → Select 「ムービー」 (Movie) and press 【選択】 (Select). → (Press 【録画】 (Record). → Press 【保存】 (Store).



Making an International Call

E.g.: To call 212-123-△△△△ in the USA



Other Handy Features

- Manner Mode

From the stand-by screen: Hold down or for at least one second.

To disable Manner mode, repeat the above step.

- Take a Message

- Setup

From the stand-by screen: Hold down (MEMO) for at least one second.

To disable Take a Message, repeat the above step.

- Playback

From the stand-by screen: Press (MEMO). → Select 「メモ再生」 (Play message) and press 【選択】 (Select). → Select the message you want to listen to and press 【再生】 (Play).

For inquiries, please contact

au Customer Service Center (General Information)

- If you are calling from a landline phone: 0077-7-111 (toll free)
- If you are calling from an au mobile phone: 157 (toll free)