



Turning the power on and off

■Turning the power on

Press and hold for more than one second.

■Turning the power off

Press and hold for more than one second.

Setting the date and time

You can set the phone to display the date and time on the stand-by screen.

Press → press → press → press .

Checking your own phone number and email address

Press → press .

Making a call / Answering a call

■Making a call

Enter the phone number you want to call → press .

To adjust the receiver volume during a call : press .

To end the call : press .

■Answering a call

Press while the phone is ringing.

Storing data in the Address book / Displaying the Address book

■Storing data in the Address book

Press for more than one second → press to select the item you want to store → press → enter the data → press .

■Displaying the Address book

Press to display the Gyo(hiragana row) search screen → press to select the hiragana row under which the entry is stored → press to select the appropriate name → press to display the Address book entry details screen.

Setting the E-mail and EZweb default settings

Before you can begin using the E-mail and EZweb service, you must set the default settings. When you set the default settings, your e-mail address will be registered, allowing you to send and receive e-mail as well as access the internet.

Press or → press → set the default settings → press .

Using E-mail and C-mail

■E-mail

If you subscribed to the EZweb service when you purchased your phone, you will be able to use the E-mail service immediately. If you did not, please contact the au shop where you purchased your phone for further information. Make sure that you set the default settings before using the E-mail and EZweb services for the first time. (See "Setting the E-mail and EZweb default settings" above.)

■Sending a E-mail message

Press → press → press to select the input field → press → press → enter the recipient's address → press → press to select the input field → press → enter the subject → press → press to select the input field → press → enter the message → press → press .

■Reading a received E-mail message

When you receive an E-mail message, "EX-ll X件" (X New E-mail), where X represents the number of messages received, will be displayed on the stand-by screen.

Press to select 「EX-ll X件」 → press → press to select 「メッセージ」 (Main folder) → press → press to select the e-mail message you want to read → press .

■C-mail

Subscribers in areas other than the metropolitan area and Chubu district need to apply for a separate subscription to use C-mail.

■Sending a C-mail message

Press for more than one second → press → enter the message → press → press → enter the recipient's phone number → press .

■Reading a received C-mail message

When you receive an C-mail message, "CX-ll X件" (X New C-mail), where X represents the number of messages received, will be displayed on the stand-by screen.

Press to select 「CX-ll X件」 → press .

Using EZweb

EZweb is an information service that allows you to enjoy easy internet access from your mobile phone.

If you subscribed to the EZweb service when you purchased your phone, you will be able to use the EZweb service immediately. If you did not, please contact the au shop where you purchased your phone for further information. Make sure that you set the default settings before using the E-mail and EZweb services for the first time. (See "Setting the E-mail and EZweb default settings" above.)

Press → press → select the website you want to view.

Using the Camera(Photo/Movie)

■Taking a Photo

Press → press to take the photo → press to save the image.

■Recording a Movie clip

Press for more than one second → press to start recording the movie clip → press to stop recording → press to save the image.

Making an international call

Example: To call United States, number 212-123-XXXX.

Access code: 005345 → 1 → Area code: 212 → 123XXXX → press .
Country code (USA) Subscriber's number

English announcement function

This function allows you to set the phone so that Voice mail service operation instructions and answering messages are played in english.

Press → press → press → press → press .

Other handy features

■Setting the Manner mode

Press for more than one second.

To disable Manner mode, press for more than one second from the stand-by screen.

■Setting simple absence memo

Press for more than one second.

To disable simple absence memo, press for more than one second from the stand-by screen.

For inquiries, please contact

au customer service center (General information)

■If you are calling from a landline phone : 0077-7-111 (toll free)

■If you are calling from an au mobile phone : 157 (toll free)