



English Simple Manual (簡易英語版)

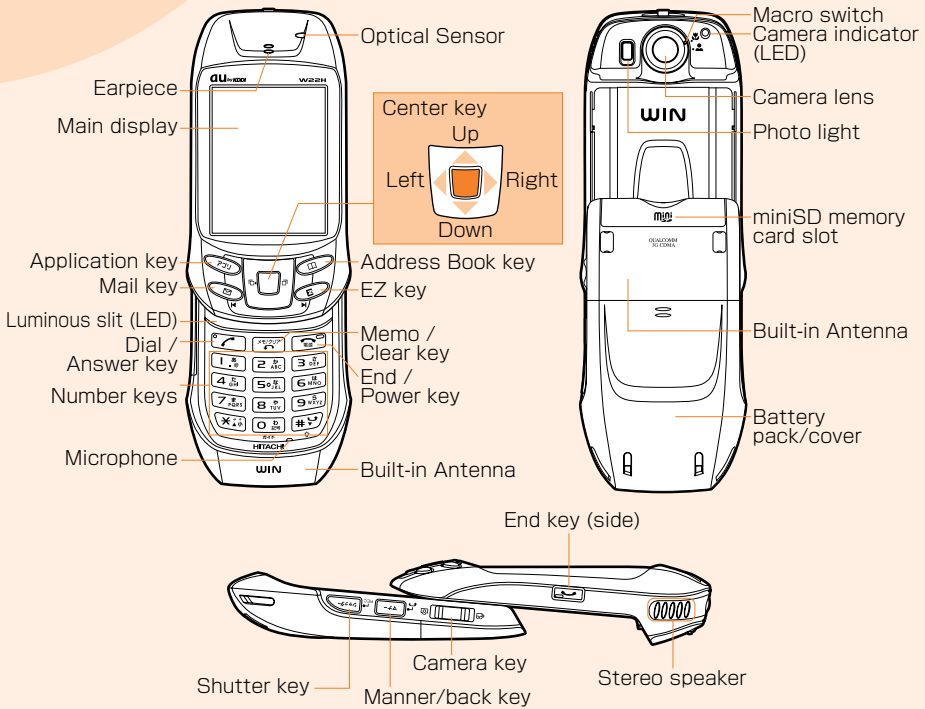

Turning Power On and Off

●Turning power on

Hold down  for a few seconds.



●Turning power off

Hold down  for at least one second.

Applying the Phone's Default Settings

From the stand-by screen: Press . → Press .


Checking Your Own Phone Number and E-mail address


From the stand-by screen: Press . → Press .

Placing and Answering a Call

●Placing a Call

From the stand-by screen: Enter the phone number you want to call.

→ Press .

To end a call: Press .

●Answering a Call




When the phone starts ringing, press .

To adjust the earpiece volume during a call: Use .

Storing and Recalling an Address Book Data




● Storing Data

From the stand-by screen: Hold down  for at least one second.

- Use  to select the Address Book record you want to edit. → Press  [編集](Edit).
- Enter the data. → Press  [登録](Store).

● Recalling Data





From the stand-by screen: Press  to display the Hiragana Row Search screen.

- Use  to select the hiragana row for the record you want.
- Use  to select the name of the record.
- Press  [表示](Display) to display the Address Book record screen.

Using the Camera (Movie and Snapshot)

● Recording a Movie Clip

From the stand-by screen: Slide the camera key upwards.




- Press  [録画](Record) or  to start recording. → Press  [終了](End).
- Press  [保存](Store) to store the movie.

Pressing  [II](Pause) during recording pauses recording.

Sliding Camera key downwards in the Movie mode changes to the Photo mode.

● Taking a Snapshot

 
From the stand-by screen: Slide the camera key downwards.

- Press  [シャッター](Shutter) or  (Shutter) to record a snapshot.
- Press  [保存](Store) to store the photo.

Sliding camera key upwards in the Photo mode changes to the Movie mode.

Making an International Call

Ex: To call 212-123-△△△△ in the USA



English Voice Mail Answering Messages

You can configure Voice Mail to play operation instructions and answering messages in English.

- From the stand-by screen: Press . → Press . → Press . → Press . → Press .

Other Handy Features

● Manner Mode

From the stand-by screen: Hold down  for at least one second.

Repeat the above operation to disable the Manner mode.


● Take A Message Feature (Voice Recording)

From the stand-by screen: Hold down  for at least one second.

Repeat the above operation to disable the Take A Message feature.

For inquiries, please contact

au Customer Service Center (General Information)

● If you are calling from a landline phone:  0077-7-111 (toll free)

● If you are calling from an au mobile phone: 157 (toll free)