




English Simple Manual (簡易英語版)

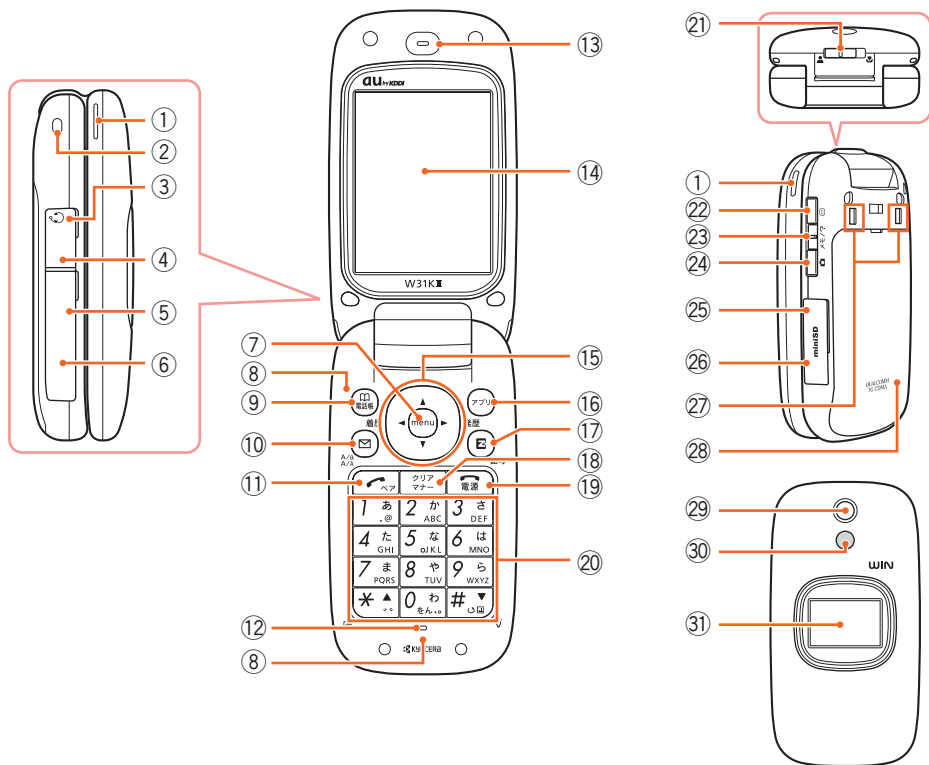

Nomenclature





- | | | |
|----------------------------------|------------------------------|--|
| ① Stereo speaker | ⑫ Microphone | ⑳ Memo/Help key |
| ② Strap mount | ⑬ Earpiece | ㉑ Camera key |
| ③ Earphone/microphone jack cover | ⑭ Main display | ㉒ miniSD card slot cover |
| ④ Earphone/microphone jack | ⑮ Jog key | ㉓ miniSD card slot |
| ⑤ External connection jack cover | ⑯ Application Key | ㉔ Charging terminals |
| ⑥ External connection jack | ⑰ EZ key | ㉕ Battery pack cover
(battery pack compartment) |
| ⑦ Center key | ⑱ Clear/Manner Mode key | ㉖ Camera (lens) |
| ⑧ Antenna (built-in) | ㉒ Power/End key | ㉗ Shooting light/Call alert lamp |
| ⑨ Address Book key | ㉓ Number keypad | ㉘ Sub-display |
| ⑩ Mail key | ㉔ Macro mode selector switch | |
| ⑪ Send key | ㉕ Voice Support key | |

Turning the Power On and Off

- Turning the power on
Hold down  for at least one second.
- Turning the power off
Hold down  for at least two seconds.

Applying the EZweb Default Settings






To send and receive e-mails or use EZweb, you must first subscribe to EZweb. You should also apply the default settings before sending and receiving e-mails or using EZweb. Applying the default settings automatically sets your e-mail address.

From the stand-by screen: Press  or . → Press  [OK] (to begin applying the default settings). → Press  [OK] .











Checking Your Own Phone Number/E-mail Address

From the stand-by screen: Press . → Press  (displays your own phone number and e-mail address in the profile).




 



Placing and Answering a Call

- Placing a call
From the stand-by screen: Enter the phone number you want to call. → Press .
To end the call: Press .
- Answering a call
When the phone rings, press .
To end the call: Press .
To adjust the earpiece volume: Press .

Storing and Recalling Address Book Entries

- Storing an entry
From the stand-by screen: Press . → Press  [メニュー] (Menu), select 「新規登録」 (Add new) and press  [選択] (Select). → Select the item to be stored and press  [編集] (Edit). → Enter the data and press  [OK] . → Check the details and press  [完了] (End).
- Recalling an entry
From the stand-by screen: Press . → Press  to select the hiragana row for the desired entry (あかさたな・・・). → Press  to select the desired name. → Press .

Sending and Receiving (Reading) E-mails

- Sending an e-mail
From the stand-by screen: Press . → Select 「新規作成」(New) and press  [OK] . → Enter the recipient's e-mail address, the subject and the message by following the on-screen instructions. → Press  [送信] (Send). → Press  「送信」 (Send).
- Receiving (reading) e-mails
When you receive e-mails, the phone emits the incoming e-mail tone and displays the new e-mail message 「新着Eメール△件」 (You have △ new e-mails) on the stand-by screen.
Select 「新着Eメール」 (New) and press  [確認] (Check). → Select the folder and press  [OK] . → Select the e-mail you want to read and press  [表示] (Display).

Using the Camera (Photos and Movies)

- Taking a photo

From the stand-by screen: Press . → Select 「カメラ」 (Camera) and press 【選択】 (Select). → Select 「フォト」 (Photo) and press 【選択】 (Select)*1. → Press 【撮影】 (Shoot). → Press 【保存】 (Store).

- Recording a movie

From the stand-by screen: Press . → Select 「カメラ」 (Camera) and press 【選択】 (Select). → Select 「ムービー」 (Movie) and press 【選択】 (Select)*1. → Press 【録画】 (Record). → Press 【終了】 (End). → Press 【保存】 (Store)*2.

*1: To change the photo mode, press .

*2: If the movie mode is 「長時間」 (Long), the movie is automatically saved when recording ends.

Making an International Call

E.g.: To call 212-123-△△△△ in the USA

→ → → → → → → → → → → → → →

International access code

Country code(USA)

Area code

Number you want to call

Other Handy Features

- Manner Mode

From the stand-by screen: Hold down for at least one second.

To disable Manner mode, repeat the above step.

- Take a Message

· Setup

From the stand-by screen: Hold down (メモ?) for at least one second.

To disable Take a Message, repeat the above step.

· Playback

From the stand-by screen: Press (メモ?). → Select 「簡易留守メモ」 (Answer Phone) and press 【選択】 (Select) → Select 「メモ再生」 (Play message) and press 【選択】 (Select). → Select the message you want to listen to and press 【再生】 (Play).

For inquiries, please contact

au Customer Service Center (General Information)

- If you are calling from a landline phone: ☎0077-7-111 (toll free)
- If you are calling from an au mobile phone: 157 (toll free)