



Turning the W32K On and Off

- Turning the W32K On
Press and hold [切] for more than one second.
- Turning the W32K Off
Press and hold [切] for more than two seconds.

Setting the Date and Time

You can set the phone to display the date and time on the stand-by screen. When this setting is enabled, the W32K will receive current date and time information for the local service area, and the date and time will be updated accordingly.

From the stand-by screen: press [⊕] ▶ press [7] ▶ press [1] ▶ press [1].

Checking Your Own Phone Number and E-mail Address

From the stand-by screen: press [⊕] ▶ press [0].

Making / Answering a Call

- Making a Call
From the stand-by screen: enter the phone number you want to call ▶ press [通話].
To end the call: press [切].
To call the phone number stored in No.001 to 003: press [1] to [3] ▶ press [通話].
- Answering a Call
Press [通話] while the phone is ringing.
To adjust the earpiece volume during a call: press [⊕].

Storing an Entry in the Phone Book / Retrieving a Phone Book Entry

- Storing an Entry
From the stand-by screen: press and hold [F1] for more than one second ▶ select the item you want to store ▶ press [⊕] ▶ enter the data ▶ press [F1] [完了].
- Retrieving an Entry
From the stand-by screen: press [F1] to display the Heading (hiragana row: a, ka, sa, ta, na, ha, ma, ya, ra, wa, or alphabet/other) Search screen ▶ press [⊕] to select the heading under which the entry is stored ▶ press [⊕] to select the appropriate name ▶ press [⊕] to display the Phone Book Entry details screen.

Setting the E-mail and EZweb Default Settings

Before you can begin using the E-mail and EZweb services, you must set the default settings. When you set the default settings, your E-mail address will be registered, allowing you to send and receive E-mails as well as access the Internet.

From the stand-by screen: press [] or [] ▶ press [⊕] ▶ set the default settings ▶ press [⊕].

Using E-mail and C-mail

●E-mail

To use the E-mail service, you need to subscribe to the EZweb service. If you did not subscribe it when you purchased your phone, please contact au Customer Service Center or au shop for further information. Make sure that you set the default settings before using the E-mail and EZweb services for the first time. (See "Setting the E-mail and EZweb Default Settings" in previous page.)

• Sending an E-mail Message

From the stand-by screen: press ▶ press ▶ press to select the 宛先 input field ▶ press ▶ press ▶ press ▶ enter the recipient's address ▶ press ▶ press ▶ press to select the 件名 input field ▶ press ▶ enter the subject ▶ press ▶ press to select the 本文 input field ▶ press ▶ enter your message ▶ press ▶ press ▶ press .

• Reading a Received E-mail Message

When you receive an E-mail message, "新着EメールX件" (X New E-mail), where X represents the number of messages received, will be displayed on the stand-by screen.

From the stand-by screen: press to select [新着Eメール] (New E-mail) ▶ press ▶ press to select [メインフォルダ] (Main folder) ▶ press ▶ press to select the E-mail message you want to read ▶ press .

●C-mail

• Sending a C-mail Message

From the stand-by screen: press and hold for more than one second ▶ press ▶ press to select [宛先未設定] (No destination) ▶ press ▶ enter the recipient's phone number ▶ press ▶ press to select [メッセージ未設定] (No message) ▶ press ▶ enter your message ▶ press ▶ press ▶ press .

• Reading a Received C-mail Message

When you receive an C-mail message, "新着CメールX件" (X New C-mail), where X represents the number of messages received, will be displayed on the stand-by screen.

From the stand-by screen: press to select [新着Cメール] (New C-mail) ▶ press ▶ press to select the C-mail message you want to read ▶ press .

Using EZweb

EZweb is an information service that allows you to enjoy easy Internet access from your phone. To use the EZweb service, you need to subscribe to the EZweb service. If you did not subscribe it when you purchased your phone, please contact au Customer Service Center or au shop for further information. Make sure that you set the default settings before using the E-mail and EZweb services for the first time. (See "Setting the E-mail and EZweb Default Settings" in previous page.)

From the stand-by screen: press ▶ press ▶ select the website you want to view.

Using the Camera (Photos/Movie Clips)

●Taking a Photo

From the stand-by screen: press ▶ press to take the photo ▶ press to save the photo.

●Recording a Movie Clip

From the stand-by screen: press and hold for more than one second ▶ press to start recording the movie clip ▶ press to stop recording ▶ press to save the movie.

Making an International Call

Ex: To call 212-123-△△△△ in the USA

▶ ▶ ▶ ▶ ▶ ▶ △△△△ ▶ press .

↑ International access code
↑ Country code (USA)
↑ Area code
↑ Phone number you want to call

Other Handy Features

●Manner Mode

From the stand-by screen: press and hold for more than one second.

To disable Manner mode: press and hold for more than one second from the stand-by screen.

●Setting the Voice Record Function

From the stand-by screen: press and hold for more than one second.

To disable the Voice Record function: press and hold for more than one second from the stand-by screen.

For inquiries, please contact

au Customer Service Center (General Information)

●If you are calling from a landline phone: ☎ 0077-7-111 (toll free)

●If you are calling from an au mobile phone: 157 (toll free)

Pressing "zero" will connect you to an operator, after calling "157" on your au cellphone.