 


W41K

English Simple Manual (簡易英語版)



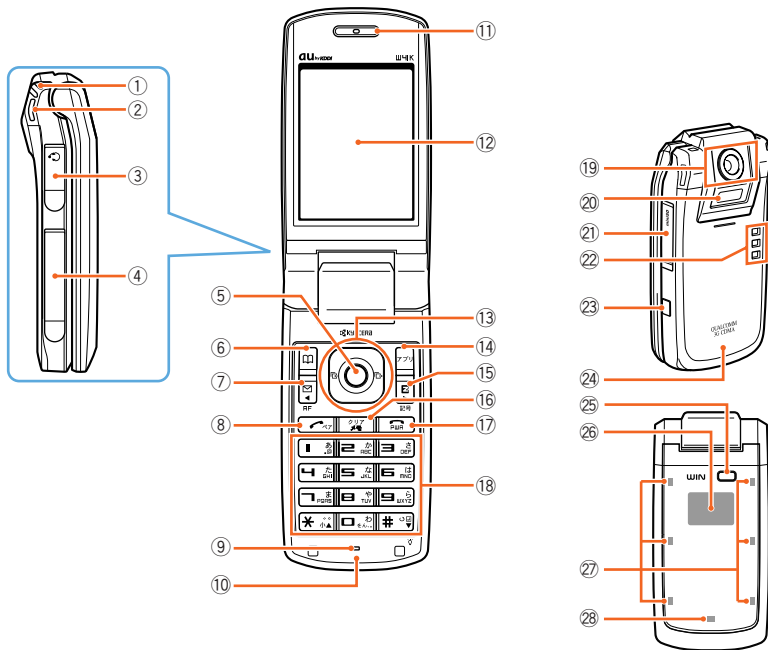

Nomenclature

- ① Strap mount
- ② Stereo speaker
- ③ Earphone microphone jack
- ④ External connection jack
- ⑤ Center key
- ⑥ Address key
- ⑦ Mail key
- ⑧ Send key
- ⑨ Microphone
- ⑩ Antenna (built-in)

- ⑪ Earphone
- ⑫ Main display
- ⑬ Jog key
- ⑭ Application key
- ⑮ EZ key
- ⑯ Clear/Memo key
- ⑰ Power/End key
- ⑱ Number keypad
- ⑲ Camera (lens)
- ⑳ Infrared port





- ㉑ miniSD card slot
- ㉒ Charging terminals
- ㉓ Manner/Shutter key
- ㉔ Battery pack cover
(battery pack compartment)
- ㉕ Shooting light
- ㉖ Sub-display
- ㉗ Call alert lamp
- ㉘ Charging lamp

Turning the Power On and Off

- Turning the power on
Hold down  for at least one second.
- Turning the power off
Hold down  for at least two seconds.

Applying the EZweb Default Settings






To send and receive e-mail or use EZweb, you must first subscribe to EZweb. You should also apply the default settings before sending and receiving e-mail or using EZweb. Applying the default settings automatically sets your e-mail address.

From the stand-by screen: Press  or . → Press  [OK] (to begin applying the default settings). → Press  [OK] .



 







Checking Your Own Phone Number/E-mail Address

From the stand-by screen: Press . → Press  (displays your own phone number and e-mail address in the profile).








Making and Answering a Call

 - Making a call
From the stand-by screen: Enter the phone number you want to call. → Press .
To end the call: Press .
- Answering a call
When the phone rings, press .
To end the call: Press .
To adjust the earpiece volume: Press .












Storing and Recalling Address Book Entries

- Storing an entry
From the stand-by screen: Press . → Press  [メニュー] (Menu), select 「新規登録」 (Add new) and press  [選択] (Select). → Select the item to be stored and press  [編集] (Edit). → Enter the data and press  [OK] . → Check the details and press  [完了] (End).
- Recalling an entry
From the stand-by screen: Press . → Press  to select the hiragana row for the desired entry (あかさたな・・・) . → Press  to select the desired name. → Press .

Sending and Receiving (Reading) E-mails

- Sending an e-mail
From the stand-by screen: Press . → Select 「新規作成」(New) and press  [選択] (Select). → Enter the recipient's e-mail address, the subject and the message by following the on-screen instructions. → Press  [送信] (Send). → Select 「送信」 (Send) and press  [選択] (Select).
- Receiving (reading) e-mail
When you receive e-mail, the phone emits the incoming e-mail tone and displays the new e-mail message 「新着Eメール△件」 (You have △ new e-mails) on the stand-by screen.
Select 「新着Eメール」 (New) and press  [確認] (Check). → Select the folder and press  [選択] (Select). → Select the e-mail you want to read and press  [表示] (Display).

Using the Camera (Photos and Movies)

 
- Taking a photo
From the stand-by screen: Press . → Select 「カメラ」 (Camera) and press  [選択] (Select). → Select 「フォト」 (Photo) and press  [選択] (Select)*1. → Press  [撮影] (Shoot). → Press  [保存] (Store).
- Recording a movie
From the stand-by screen: Press . → Select 「カメラ」 (Camera) and press  [選択] (Select). → Select 「ムービー」 (Movie) and press  [選択] (Select)*1. → Press  [録画] (Record). → Press  [終了] (End). → Press  [保存] (Store)*2.

*1: To change the photo mode, press .

*2: If the movie mode is 「長時間」 (Long), the movie is automatically saved when recording ends.

Making an International Call

E.g.: To call 212-123-△△△△ in the USA



Other Handy Features

● Manner Mode

From the stand-by screen: Hold down  (Manner/Shutter key) for at least one second.
To disable Manner mode, repeat the above step.





● Take a Message

• Setup

From the stand-by screen: Hold down  for at least one second.

To disable Take a Message, repeat the above step.

• Playback

From the stand-by screen: Press . → Select 「簡易留守メモ」 (Answer Phone) and press  【選択】 (Select) → Select 「メモ再生」 (Play message) and press  【選択】 (Select). → Select the message you want to listen to and press  【再生】 (Play).

For inquiries, please contact

au Customer Service Center (General Information)

● If you are calling from a landline phone: ☎0077-7-111 (toll free)

● If you are calling from an au mobile phone: 157 (toll free)