

 









Turning Power On and Off

- ▼ **Turning Power On**
Hold down  for at least one second.
- ▼ **Turning Power Off**
Hold down  for at least one second.

Checking Your Own Phone Number and E-mail Address

On the stand-by screen: Press . ▶ Press .

Making and Answering a Call

- ▼ **Making a Call**
On the stand-by screen: Enter the phone number you want to call. ▶ Press .
 - To adjust the earpiece volume: Use .
 - To end a call: Press .
- ▼ **Answering a Call**
When the phone starts ringing, press .
 - To adjust the earpiece volume: Use .
 - To end a call: Press .

Storing and Recalling a Memory Dial Data

▼ Storing Data

On the stand-by screen: Hold down **[M]** for at least one second. ▶ Use **[D]** to select the Memory Dial record you want to edit and press **[OK]**. ▶ Enter the data.
▶ Press **[END]** when finished.

▼ Recalling Data

On the stand-by screen: Press **[M]**. ▶ Use **[D]** to select the Memory Dial record you want to recall. ▶ Press **[OK]**.

Using the Camera

▼ Taking a Snapshot

 
On the stand-by screen: Press **[CAM]**. ▶ Use **[D]** to select **フォト** and press **[OK]**. ▶ Press **[CAM]** or **[CAM]** to take a snapshot. ▶ Press **[CAM]** to store the photo.
• To switch from Photo mode to Movie mode: Press **[MODE]**.

▼ Recording a Movie

On the stand-by screen: Press **[CAM]**. ▶ Use **[D]** to select **ムービー** and press **[OK]**. ▶ Press **[CAM]** or **[CAM]** to start recording. ▶ Press **[CAM]** or **[CAM]** to stop recording. ▶ Press **[CAM]** to store the movie.
• To pause recording: Press **[MODE]**.
• To switch from Movie mode to Photo mode: Press **[MODE]**.

Making an International call

Ex. To Call 212-123-△△△△ in the USA



English Voice Mail Answering Messages

You can configure Voice Mail to play operation instructions and answering messages in English.

On the stand-by screen: Press **[M]**. ▶ Press **[7 (M)]**. ▶ Press **[6 (M)]**. ▶ Press **[PWA]**, **[PWA]**.

Other Features

▼ Manner Mode

On the stand-by screen: Hold down **[M]** for at least one second.

- To disable Manner Mode: After the above operation, hold down **[M]** for at least one second.

▼ Easy Voice Recording

On the stand-by screen: Hold down **[PWA]** for at least one second.

- To disable Easy Voice Recording: After the above operation, hold down **[PWA]** for at least one second.

For inquiries please contact

au Customer Service Center (General Information)

- If you are calling from a landline phone: **[TEL]** 0077-7-111 (toll free)
- If you are calling from an au mobile phone: 157 (toll free)