 


W42K

English Simple Manual (簡易英語版)

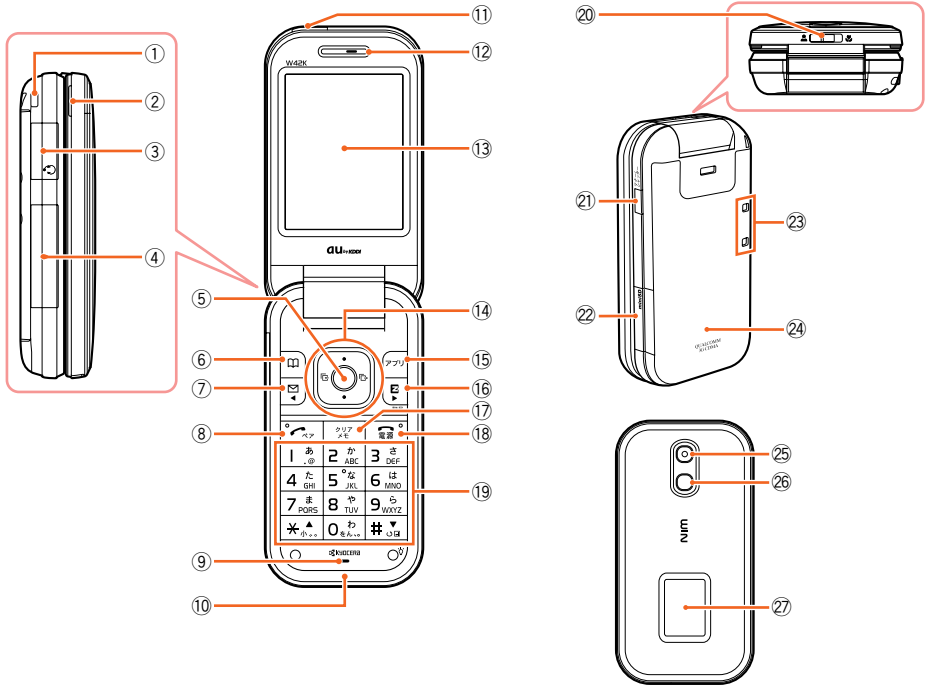 



Nomenclature

- | | | |
|----------------------------|----------------------|---|
| ① Strap mount | ⑩ Antenna (built-in) | ⑲ Number keypad |
| ② Stereo speaker | ⑪ Infrared port | ⑳ Macro mode selector switch |
| ③ Earphone microphone jack | ⑫ Earphone | ㉑ Manner/Shutter key |
| ④ External connection jack | ⑬ Main display | ㉒ miniSD card slot |
| ⑤ Center key | ⑭ Jog key | ㉓ Charging terminals |
| ⑥ Address key | ⑮ Application key | ㉔ Battery pack cover (battery pack compartment) |
| ⑦ Mail key | ⑯ EZ key | ㉕ Camera (lens) |
| ⑧ Send key | ⑰ Clear/Memo key | ㉖ Shooting light |
| ⑨ Microphone | ⑱ Power/End key | ㉗ Sub-display |





English Simple Manual (簡易英語版)

Turning the Power On and Off

- Turning the power on
Hold down  for at least one second.
- Turning the power off
Hold down  for at least two seconds.

Applying the EZweb Default Settings






To send and receive e-mail or use EZweb, you must first subscribe to EZweb. You should also apply the default settings before sending and receiving e-mail or using EZweb. Applying the default settings automatically sets your e-mail address.

From the stand-by screen: Press  or . → Press  [OK] (to begin applying the default settings). → Press  [OK] .











Checking Your Own Phone Number/E-mail Address

From the stand-by screen: Press . → Press  (displays your own phone number and e-mail address in the profile).

Making and Answering a Call

- Making a call
From the stand-by screen: Enter the phone number you want to call. → Press .
To end the call: Press .
- Answering a call
When the phone rings, press .
To end the call: Press .
To adjust the earpiece volume: Press .

Storing and Recalling Address Book Entries

- Storing an entry
From the stand-by screen: Press . → Press  [メニュー] (Menu), select 「新規登録」 (Add new) and press  【選択】 (Select). → Select the item to be stored and press  【編集】 (Edit). → Enter the data and press  [OK] . → Check the details and press  【完了】 (End).
- Recalling an entry
From the stand-by screen: Press . → Press  to select the hiragana row for the desired entry (あかさたな・・・). → Press  to select the desired name. → Press .

Sending and Receiving (Reading) E-mails

● Sending an e-mail

From the stand-by screen: Press → Select 「新規作成」(New) and press 【選択】 (Select). → Enter the recipient's e-mail address, the subject and the message by following the on-screen instructions. → Press 【送信】 (Send). → Select 「送信」 (Send) and press 【選択】 (Select).

● Receiving (reading) e-mail

When you receive e-mail, the phone emits the incoming e-mail tone and displays the new e-mail message 「新着Eメール△件」 (You have △ new e-mails) on the stand-by screen.

Select 「新着Eメール」 (New) and press 【確認】 (Check). → Select the folder and press 【選択】 (Select). → Select the e-mail you want to read and press 【表示】 (Display).

Using the Camera (Photos and Movies)

● Taking a photo

From the stand-by screen: Press . → Select 「カメラ」 (Camera) and press 【選択】 (Select). → Select 「フォト」 (Photo) and press 【選択】 (Select)*¹. → Press 【撮影】 (Shoot). → Press 【保存】 (Store).

● Recording a movie

 
From the stand-by screen: Press . → Select 「カメラ」 (Camera) and press 【選択】 (Select). → Select 「ムービー」 (Movie) and press 【選択】 (Select)*¹. → Press 【録画】 (Record). → Press 【終了】 (End). → Press 【保存】 (Store)*².

*¹: To change the photo mode, press .

*²: If the movie mode is 「長時間」 (Long), the movie is automatically saved when recording ends.

Making an International Call

E.g.: To call 212-123-△△△△ in the USA



Other Handy Features

● Manner Mode

From the stand-by screen: Hold down (Manner/Shutter key) for at least one second.

To disable Manner mode, repeat the above step.

● Take a Message

• Setup

From the stand-by screen: Hold down for at least one second.

To disable Take a Message, repeat the above step.

• Playback

From the stand-by screen: Press . → Select 「簡易留守メモ」 (Answer Phone) and press 【選択】 (Select) → Select 「メモ再生」 (Play message) and press 【選択】 (Select). → Select the message you want to listen to and press 【再生】 (Play).

For inquiries, please contact

au Customer Service Center (General Information)

● If you are calling from a landline phone: ☎0077-7-111 (toll free)

● If you are calling from an au mobile phone: 157 (toll free)