



W42SA English Simple Manual

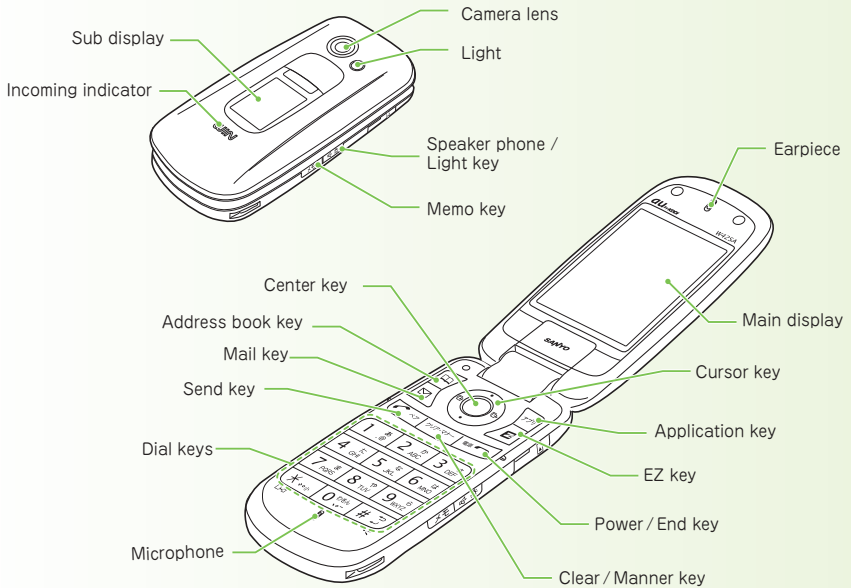

Turning the Power On / Off


Press  for more than one second.

Confirming Your Phone Number / E-mail Address

Press .

Making a Call / Answering a Call

■ Making a Call

Enter the phone number you want to call and press .

■ Answering a Call

Press  while the phone is ringing.

- To end the call : Press .
- To adjust the earpiece volume during a call : Press .

Using the Address Book

Saving an Entry in the Address Book

Press for more than one second → Use to select (Name) and press → Enter a name and press → Use to select (Phone number 1) and press → Enter a phone number and press → Use to select Type and press → Use to select (E-mail address1) and press → Enter an E-mail address and press → Use to select Type and press → Press → Press .

Displaying the Address Book

Press → Use to select the row, use to select the desired name and press .

Initial Settings for E-mail and EZweb

To use the E-mail and EZweb services, you need to subscribe to the EZweb service. If you did not subscribe it when you purchased your phone, please contact au Customer Service Center or au shop for further information. Make sure that you set the initial settings before using the E-mail and EZweb services for the first time. Although the initial settings automatically determine your E-mail address, you can change it as you like.

Press , or → Press → When you complete the initial settings, press .

Using E-mail

E-mail is a service through the Internet that allows you to exchange mails with other mobile phones or personal computers that support E-mail. You can send and receive a message of up to 5000 double-width(or 10000 single-width) characters. Photos and movies can also be sent and received.

Sending an E-mail

Press → Use to select “新規作成” (Create New) and press → Use to select (Recipient) and press → Press → Use to select “直接入力” (Manual Input) and press → Enter a Recipient and press → Press → Use to select (Subject) and press → Enter a Subject and press → Use to select (Body) and press → Enter a Body and press → Press .

Reading a Received E-mail

When you receive an E-mail, “Eメール X件” (E-mail X) will be displayed to the standby screen.

Use to select “Eメール X件” (E-mail X) and press → Use to select “メインフォルダ” (Main Folder) and press → Use to select the desired E-mail and press .

Using C-mail

C-mail is a service that allows you to exchange mails with other au mobile phones that support C-mail. You can send and receive a message of up to 50 double-width(or 100 single-width) characters.

Sending a C-mail

Press for more than one second → Use to select “新規作成” (Create New) and press → Use to select (Recipient) and press → Use to select “直接入力” (Manual Input) and press → Enter a Recipient and press → Use to select (Body) and press → Enter a Body and press → Press .

■ Reading a Received C-mail

When you receive a C-mail, “Cメール X件” (C-mail X) will be displayed to the standby screen.

Use to select “Cメール X件” (C-mail X) and press .

Using EZweb

EZweb is a service that allows you to enjoy Internet using your au mobile phone. You can access to various information sites from Top Menu.

■ Displaying the Top Menu

Press → Use to select (EZweb) → Use to select “トップメニュー” (Top Menu) and press .

Using the Camera

■ Taking a Photo

 
Press → Use to select “カメラ” (Camera) and press → Use to select “フォト撮影” (Photo) and press → Press (to take a photo) → Press (to save the photo).

■ Recording a Movie Clip

Press → Use to select “カメラ” (Camera) and press → Use to select “ムービー撮影” (Movie) and press → Press (to start recording a movie) → Press (to stop recording a movie) → Press (to save the movie).

Making an International Call

Example: To call 212-123-XXXX in the USA



Using the English Announcement

This function allows you to change the voice guidance and the answering message of Automatic Answering Service to English.

Press 5 4 6 in turn.

Using the Silent Mode

This function informs you of an incoming call by vibration and allows you to record the caller's voice message in In-Phone Ans Machn when you cannot answer the call.

■ Enabling/Disabling the Silent Mode

Press for more than one second.

Using the In-Phone Ans Machn

This function allows you to answer incoming calls by playing a message and record the caller's voice message.

■ Enabling/Disabling the In-Phone Ans Machn

Press for more than one second.

For inquiries, please contact

au Customer Service Center (General Information)

■ If you are calling from a landline phone : 0077-7-111(toll free)

■ If you are calling from an au mobile phone : 157(toll free)