



### Turning the Power On and Off

- Turning the Power On  
Press and hold **off** for more than one second.
- Turning the Power Off  
Press and hold **off** for more than one second.

### Checking Your Own Phone Number and E-mail Address

From the stand-by screen: press **■** ➔ press **0=**.

### Making/Answering a Call

- Making a Call  
From the stand-by screen: enter the phone number ➔ press **on**.  
To end the call: press **off**.
- Answering a Call  
Press **on** while the phone is ringing.  
To adjust the earpiece volume during a call: press **🔊** ➔ press **■**[OK].

## Storing/Recalling an Entry in the Phone Book

### ● Storing an Entry

From the stand-by screen: press and hold for more than one second ➔ press to select the item ➔ press [選択] (Select) to enter the data ➔ press [登録] (Add) ➔ press [登録] (Add).

### ● Recalling an Entry

From the stand-by screen: press to display the Name Search screen ➔ press to select the name ➔ press [選択] (Select) to display the entry's details screen.

## Using the Camera (Movie Clips/Photos)

### ● Recording a Movie Clip

From the stand-by screen: press and hold for more than one second ➔ press [録画] (Record) to start recording ➔ press [保存] (Save) to save the movie.

To stop recording: press [停止] (Stop) during recording.

### ● Taking a Photo

From the stand-by screen: press ➔ press [撮影] (Shoot) to take a photo ➔ press [保存] (Save) to save the photo.

## Making an International Call

Ex: To call 212-123-△△△△ in the USA

➔ ➔ ➔ △△△△ ➔ Press .

↑ International  
access code

↑ Area code  
Country code (USA)

↑ Phone number

## English Announcement Function

You can play Voice Mail Service operation instructions and answering messages in English.

From the stand-by screen: press ➔ press ➔ press ➔ press ➔ press [発信] (Call).

## Other Handy Features

### ● Setting the Manner Mode

From the stand-by screen: press and hold for more than one second.

To cancel Manner mode: press and hold for more than one second from the stand-by screen.

### ● Setting the Voice Memo

From the stand-by screen: press and hold for more than one second.

To cancel the Voice Memo: press and hold for more than one second from the stand-by screen.

### For inquiries, please contact

au Customer Service Center (General Information)

● If you are calling from a landline phone: ☎ 0077-7-111 (toll free)

● If you are calling from an au mobile phone: 157 (toll free)