 


# W43K


 
## English Simple Manual (簡易英語版)

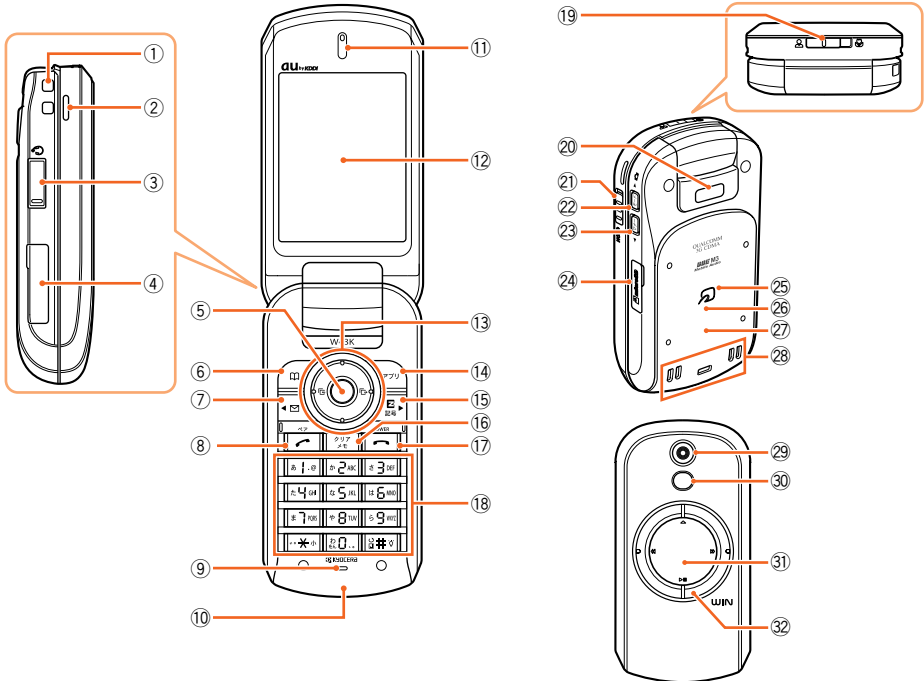

### Nomenclature

- |                            |                              |   |
|----------------------------|------------------------------|---|
| ① Strap mount              | ⑬ Jog key                    | ⑳ Manner key                                    |
| ② Stereo speakers (dual)   | ⑭ Application key            | ㉑ microSD card slot                             |
| ③ Earphone jack            | ⑮ EZ key                     | ㉒ FeliCa mark                                   |
| ④ External connection jack | ⑯ Clear/Memo key             | ㉓ au IC card (internal)                         |
| ⑤ Center key               | ⑰ Power/End key              | ㉔ Battery pack cover (battery pack compartment) |
| ⑥ Address key              | ⑱ Number keypad              | ㉕ Charging terminals                            |
| ⑦ Mail key                 | ㉑ Macro mode selector switch | ㉖ Camera (lens)                                 |
| ⑧ Send key                 | ㉒ Infrared port              | ㉗ Shooting light                                |
| ⑨ Microphone               | ㉓ HOLD key                   | ㉘ Sub-display                                   |
| ⑩ Antenna (built-in)       | ㉔ Mode key                   | ㉙ Sensor ring key                               |
| ⑪ Earphone                 |                              |   |

## Turning the Power On and Off

- Turning the power on  
Hold down  for at least one second.
- Turning the power off  
Hold down  for at least two seconds.

## Applying the EZweb Default Settings






To send and receive e-mail or use EZweb, you must first subscribe to EZweb. You should also apply the default settings before sending and receiving e-mail or using EZweb. Applying the default settings automatically sets your e-mail address.

**From the stand-by screen:** Press . → Press  [OK] (to begin applying the default settings). → Press  [OK] .

## Checking Your Own Phone Number/E-mail Address

**From the stand-by screen:** Press . → Press  (displays your own phone number and e-mail address in the profile).



 



## Making and Answering a Call

- Making a call  
**From the stand-by screen:** Enter the phone number you want to call. → Press .  
**To end the call:** Press .
- Answering a call  
**When the phone rings, press** .  
**To end the call:** Press .  
**To adjust the earpiece volume:** Press .



 








## Storing and Recalling Address Book Entries

- Storing an entry  
**From the stand-by screen:** Press . → Press  [メニュー] (Menu), select 「新規登録」 (Add new) and press  [選択] (Select). → Select the item to be stored and press  [編集] (Edit). → Enter the data and press  [OK] . → Check the details and press  [完了] (End).
- Recalling an entry  
**From the stand-by screen:** Press . → Press  to select the desired name. → Press .

## Sending and Receiving (Reading) E-mails

- Sending an e-mail  
**From the stand-by screen:** Press . → Select 「新規作成」(New) and press  [選択] (Select). → Enter the recipient's e-mail address, the subject and the message by following the on-screen instructions. → Press  [送信] (Send).
- Receiving (reading) e-mail  
**When you receive e-mail, the phone emits the incoming e-mail tone and displays the new e-mail message 「新着Eメール△件」 (You have △ new e-mails) on the stand-by screen.**  
**Select 「新着Eメール」 (New) and press**  [確認] (Check). → Select the folder and press  [選択] (Select). → Select the e-mail you want to read and press  [表示] (Display).

## Using the Camera (Photos and Movies)

- Taking a photo  
**From the stand-by screen:** Press . → Select 「カメラ」 (Camera) and press  [選択] (Select). → Select 「フォト」 (Photo) and press  [選択] (Select). → Press  [撮影] (Shoot). → Press  [保存] (Store).
- Recording a movie  
**From the stand-by screen:** Press . → Select 「カメラ」 (Camera) and press  [選択] (Select). → Select 「ムービー」 (Movie) and press  [選択] (Select). → Press  [録画] (Record). → Press  [終了] (End). → Press  [保存] (Store) \*.

\* If the movie mode is 「長時間」 (Long), the movie is automatically saved when recording ends.

## Making an International Call

E.g.: To call 212-123-△△△△ in the USA



## Other Handy Features

### ● Manner Mode

**From the stand-by screen: Hold down (Manner key) for at least one second.**

To disable Manner mode, repeat the above step.

### ● Take a Message

• Setup

**From the stand-by screen: Hold down for at least one second.**

To disable Take a Message, repeat the above step.

• Playback

**From the stand-by screen: Press . → Select 「簡易留守メモ」 (Answer Phone) and press 【選択】 (Select) → Select 「メモ再生」 (Play message) and press 【選択】 (Select). → Select the message you want to listen to and press 【再生】 (Play).**

### For inquiries, please contact

au Customer Service Center (General Information)

● If you are calling from a landline phone: ☎0077-7-111 (toll free)

● If you are calling from an au mobile phone: 157 (toll free)