


W51K



English Simple Manual (簡易英語版)

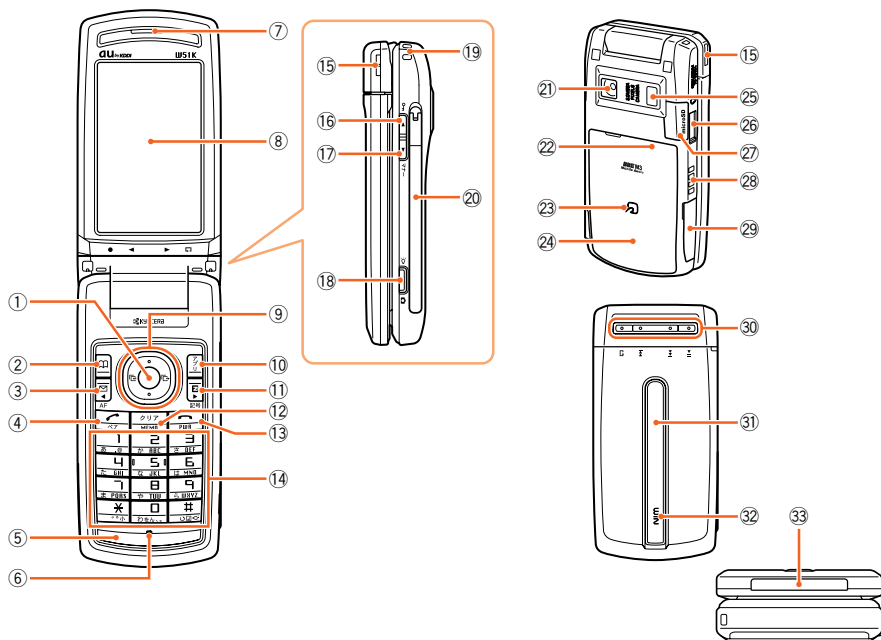

Nomenclature


- | | | |
|----------------------|--------------------------|--|
| ① Center key | ⑫ Clear/Memo key | ⑮ FeliCa mark |
| ② Address key | ⑬ Power/End key | ⑯ Battery pack cover
(battery pack compartment) |
| ③ Mail key | ⑭ Number keypad | ⑰ Shooting light |
| ④ Send key | ⑮ Stereo speakers (dual) | ⑱ Earphone jack |
| ⑤ Antenna (built-in) | ⑯ Lock key | ⑳ microSD card slot |
| ⑥ Microphone | ⑰ Manner key | ㉑ Charging terminals |
| ⑦ Earphone | ⑱ Camera key | ㉒ External connection jack |
| ⑧ Main display | ⑲ Strap mount | ㉓ Front Media key |
| ⑨ Jog key | ⑳ TV antenna | ㉔ Sub-display |
| ⑩ Application key | ㉑ au IC card (internal) | ㉕ Incoming/Charging indicator |
| ⑪ EZ key | | ㉖ Infrared port |

Turning the Power On and Off

- Turning the power on
Hold down  for at least one second.
- Turning the power off
Hold down  for at least two seconds.

Applying the EZweb Default Settings






To send and receive e-mail or use EZweb, you must first subscribe to EZweb. You should also apply the default settings before sending and receiving e-mail or using EZweb. Applying the default settings automatically sets your e-mail address.

From the stand-by screen: Press . → Press  [OK] (to begin applying the default settings). → Press  [OK] .









Checking Your Own Phone Number/E-mail Address

From the stand-by screen: Press . → Press  (displays your own phone number and e-mail address in the profile).







Making and Answering a Call

- Making a call
From the stand-by screen: Enter the phone number you want to call. → Press .
To end the call: Press .
- Answering a call
When the phone rings, press .
To end the call: Press .
To adjust the earpiece volume: Press .












Storing and Recalling Address Book Entries

- Storing an entry
From the stand-by screen: Press . → Press  [メニュー] (Menu), select 「新規登録」 (Add new) and press  [選択] (Select). → Select the item to be stored and press  [編集] (Edit). → Enter the data and press  [OK] . → Check the details and press  [完了] (End).
- Recalling an entry
From the stand-by screen: Press . → Press  to select the desired name. → Press .

Sending and Receiving (Reading) E-mails

- Sending an e-mail
From the stand-by screen: Press . → Select 「新規作成」(New) and press  [選択] (Select). → Enter the recipient's e-mail address, the subject and the message by following the on-screen instructions. → Press  [送信] (Send).
- Receiving (reading) e-mail
When you receive e-mail, the phone emits the incoming e-mail tone and displays the new e-mail message 「新着Eメール△件」(You have △ new e-mails) on the stand-by screen.
Select 「新着Eメール」(New) and press  [確認] (Check). → Select the folder and press  [選択] (Select). → Select the e-mail you want to read and press  [表示] (Display).

 
Using the Camera (Photos and Movies)

- Taking a photo
From the stand-by screen: Press . → Select 「カメラ」(Camera) and press  [選択] (Select). → Select 「フォト」(Photo) and press  [選択] (Select). → Press  [撮影] (Shoot). → Press  [保存] (Store).
- Recording a movie
From the stand-by screen: Press . → Select 「カメラ」(Camera) and press  [選択] (Select). → Select 「ムービー」(Movie) and press  [選択] (Select). → Press  [録画] (Record). → Press  [終了] (End). → Press  [保存] (Store) *.

* If the movie mode is 「長時間」(Long), the movie is automatically saved when recording ends.

Making an International Call

E.g.: To call 212-123-△△△△ in the USA



Other Handy Features

● Manner Mode

From the stand-by screen: Hold down  (Manner key) for at least one second.

To disable Manner mode, repeat the above step.

● Take a Message


• Setup

From the stand-by screen: Hold down  for at least one second.

To disable Take a Message, repeat the above step.

• Playback

From the stand-by screen: Press , → Select 「簡易留守メモ」 (Answer Phone) and press

 【選択】 (Select) → Select 「メモ再生」 (Play message) and press  【選択】 (Select). →

Select the message you want to listen to and press  【再生】 (Play).

For inquiries, please contact

au Customer Service Center (General Information)

● If you are calling from a landline phone: ☎ 0077-7-111 (toll free)

● If you are calling from an au mobile phone: 157 (toll free)