



## Turning Power On and Off

- ▼ **Turning Power On**  
Hold down for at least one second.
- ▼ **Turning Power Off**  
Hold down for at least two seconds.

## Checking Your Own Phone Number and E-mail Address

On the stand-by screen: Press . ▶ Press .

## Making and Answering a Call

- ▼ **Making a Call**  
On the stand-by screen: Enter the phone number you want to call. ▶ Press .
  - To adjust the earpiece volume: Use .
  - To end a call: Press .
- ▼ **Answering a Call**  
When the phone starts ringing, press .
  - To adjust the earpiece volume: Use .
  - To end a call: Press .

## Storing and Recalling a Memory Dial Data

### ▼ Storing Data

On the stand-by screen: Hold down for at least one second. ▶ Use to select the Memory Dial record you want to edit and press . ▶ Enter the data.  
▶ Press when finished.

### ▼ Recalling Data

On the stand-by screen: Press . ▶ Use to select the Memory Dial record you want to recall. ▶ Press .

## Using the Camera

### ▼ Taking a Snapshot

On the stand-by screen: Press . ▶ Use to select フォト and press . ▶ Press or to take a snapshot. ▶ Press to store the photo.  
• To switch from Photo mode to Movie mode: Press .

### ▼ Recording a Movie

On the stand-by screen: Press . ▶ Use to select ムービー and press . ▶ Press or to start recording. ▶ Press or to stop recording. ▶ Press to store the movie.  
• To pause recording: Press .  
• To switch from Movie mode to Photo mode: Press .

## Making an International call

Ex. To Call 212-123-△△△△ in the USA

▶ ▶ ▶ ▶ △△△△ ▶

International access code                      Country code (USA)      Number you want to call

## English Voice Mail Answering Messages

You can configure Voice Mail to play operation instructions and answering messages in English.

On the stand-by screen: Press . ▶ Press . ▶ Press . ▶ Press .

## Other Features

### ▼ Manner Mode

On the stand-by screen: Hold down for at least one second.

• To disable Manner Mode: After the above operation, hold down for at least one second.

### ▼ Easy Voice Recording

On the stand-by screen: Hold down for at least one second.

• To disable Easy Voice Recording: After the above operation, hold down for at least one second.

### *For inquiries please contact*

au Customer Service Center (General Information)

- If you are calling from a landline phone: 0077-7-111 (toll free)
- If you are calling from an au mobile phone: 157 (toll free)