




# W56T


 
## English Simple Manual

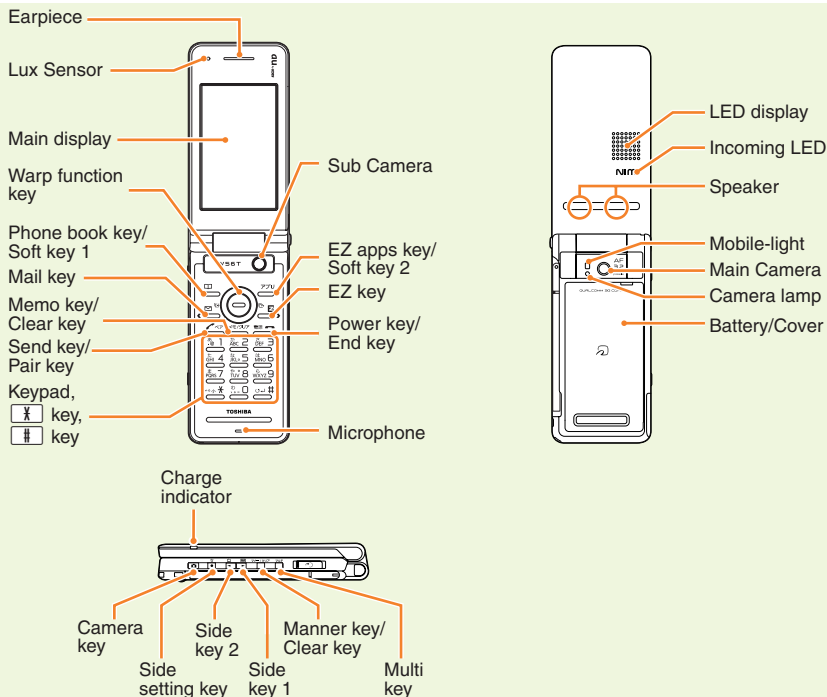






### Turning the Power On and Off

- Turning the Power On  
Press and hold  for more than one second.
- Turning the Power Off  
From the stand-by screen: press and hold  for more than one second.

### Checking Your Own Phone Number and E-mail Address

From the stand-by screen: press  ➔ press .

### Making/Answering a Call

- Making a Call  
From the stand-by screen: enter the phone number ➔ press .  
To end the call: press .
- Answering a Call  
Press  while the phone is ringing.  
To adjust the earpiece volume during a call: press  ➔ press  [OK].

## Storing/Recalling an Entry in the Phone Book

### ● Storing an Entry

From the stand-by screen: press and hold for more than one second ➤ press to select the item ➤ press [選択](Select) to enter the data ➤ press [登録](Add).

### ● Recalling an Entry

From the stand-by screen: press to display the Name Search screen ➤ press to select the name ➤ press [詳細](Detail) to display the entry's details screen.

## Using the Camera (Movie Clips/Photos)

### ● Recording a Movie Clip

From the stand-by screen: press and hold for more than one second ➤ press ( ⇄ ) ➤ press [録画](Rec) to start recording ➤ press [保存](Save) to save the movie.

To stop recording: press [停止](Stop) during recording.

### ● Taking a Photo

From the stand-by screen: press and hold for more than one second ➤ press [撮影](Shot) to take a photo ➤ press [保存](Save) to save the photo.

## Making an International Call

Ex: To call 212-123-△△△△ in the USA

➤ ➤ ➤ ➤ ➤ Press .

↑  
International  
access code

↑      ↑  
Country code (USA)  
Area code

↑  
Phone number

## English Announcement Function

You can play Voice Mail Service operation instructions and answering messages in English.

From the stand-by screen: press ➤ press ➤ press ➤ press ➤ press .

## Other Handy Features

### ● Setting the Manner Mode

From the stand-by screen: press and hold for more than one second.

To cancel Manner mode: press and hold for more than one second from the stand-by screen.

### ● Setting the Voice Memo

From the stand-by screen: press and hold for more than one second.

To cancel the Voice Memo: press and hold for more than one second from the stand-by screen.

### For inquiries, please contact

au Customer Service Center (General Information)

● If you are calling from a landline phone: ☎ 0077-7-111 (toll free)

● If you are calling from an au mobile phone: 157 (toll free)