# au A5305K

## A Simple Manual (English Version)

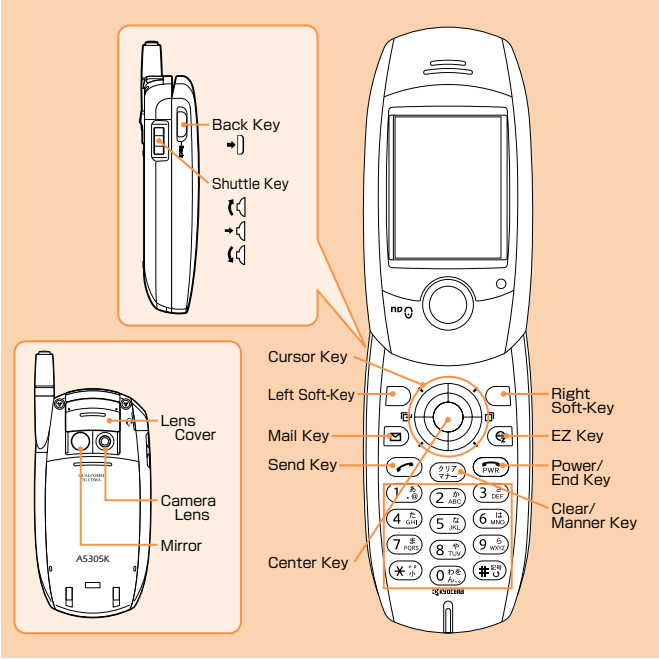


## Turning The A5305K On and Off

●Turning the A5305K On

**Press and hold (PWR) for more than one second.**

●Turning the A5305K Off

**Press and hold (PWR) for more than one second.**

## Setting the Date and Time

You can set the phone to display the date and time on the stand-by screen. When this setting is enabled, the A5305K will receive current date and time information for the local service area, and the date and time will be updated accordingly.

**From the stand-by screen: press (●) ▶ press (7) ▶ press (1) ▶ press (1).**

## Checking your own phone number and email address

**From the stand-by screen: press (●) ▶ press (0) ▶ select the item you want to display ▶ press (●).**

## Making / Answering a Call

●Making a Call

From the stand-by screen: enter the phone number you want to call ▶ press (↗).

**To end the call: press (PWR) or fold the phone closed.**

●Answering a Call

**Press (↗) while the phone is ringing.**

To adjust the earpiece volume during a call: press (▲▼) or (音量).

**If the phone is closed**

**Press →(音量) or open the phone while it is ringing.**

## Storing an Entry in the Phone Book / Retrieving a Phone Book Entry

●Storing an Entry

**From the stand-by screen: press (メニュー) for more than one second ▶ select the item you want to store ▶ press (●) ▶ enter the data ▶ press (保存).**

●Retrieving an Entry

**From the stand-by screen: press (メニュー) to display the Gyo (hiragana row: a, ka, sa, ta, na, ha, ma, ya, ra, wa, n) Search screen ▶ press (▲▼) to select the hiragana row under which the entry is stored ▶ press (▲▼) to select the appropriate name ▶ press (●) to display the Phone Book Entry details screen.**

**If the phone is closed**

**From the stand-by screen: press →(音量) ▶ press (音量) to select [アドレス帳] (Phone Book) ▶ press →(音量) ▶ press (音量) to select the hiragana row under which the entry is stored ▶ press →(音量) to display the Name Selection screen ▶ press (音量) to select the appropriate name ▶ press →(音量) to display the Phone Book Entry details screen.**

## Setting the E-mail and EZweb Default Settings

Before you can begin using the E-mail and EZweb services, you must set the default settings. When you set the default settings, your e-mail address will be registered, allowing you to send and receive e-mail as well as access the Internet.

**From the stand-by screen: press (メール) or (EZ) ▶ (●) ▶ set the default settings ▶ press (●).**

## Using E-mail and C-mail

●E-mail

If you subscribed to the EZweb service when you purchased your phone, you will be able to use the E-mail service immediately. If you did not, please contact the au shop where you purchased your phone for further information. Make sure that you set the default settings before using the E-mail and EZweb services for the first time. (See "Setting the E-mail/EZweb Default Settings" above.)

**• Sending an E-mail Message**

**From the stand-by screen: press (メール) ▶ press (1) ▶ press (▲▼) to select the (宛) input field ▶ press (●) ▶ press (●) ▶ press (7) ▶ enter the recipient's address ▶ press (●) ▶ press (メニュー) ▶ press (▲▼) to select the (題) input field ▶ enter the subject ▶ press (●) ▶ press (▲▼) to select the (本) input field ▶ enter your message ▶ press (●) ▶ press (メニュー).**

**• Reading a Received E-mail Message**

When you receive an E-mail message, "Eメール X件" ( X New E-mail), where X represents the number of messages received, will be displayed on the stand-by screen.

**From the stand-by screen: press (▲▼) to select [新着Eメール] (New E-mail) ▶ press (●) ▶ press (▲▼) to select [メインフォルダ] (Main folder) ▶ press (●) ▶ press (▲▼) to select the e-mail message you want to read ▶ press (●).**

●C-mail

Subscribers in the Tokyo and Chubu – incorporating Aichi, Gifu, and Mie prefectures – metropolitan areas do not need to subscribe to use this service. For subscribers located outside of these areas, a separate subscription is required.

**• Sending a C-mail Message**

**From the stand-by screen: press and hold (メール) for more than one second ▶ press (1) ▶ enter the message ▶ press (●) ▶ press (1) ▶ enter the recipient's phone number ▶ press (●) ▶ press (1).**

**• Reading a Received C-mail Message**

When you receive an C-mail message, "Cメール X件" ( X New C-mail), where X represents the number of messages received, will be displayed on the stand-by screen.

**From the stand-by screen: press (▲▼) to select [新着Cメール] (New C-mail) ▶ press (●).**

## Using EZweb

EZweb is an information service that allows you to enjoy easy Internet access from your mobile phone.

If you subscribed to the EZweb service when you purchased your phone, you will be able to use the EZweb service immediately. If you did not, please contact the au shop where you purchased your phone for further information. Make sure that you set the default settings before using the E-mail and EZweb services for the first time. (See "Setting the E-mail/EZweb Default Settings" above.)

**From the stand-by screen: press (EZ) ▶ press (1) ▶ select the website you want to view.**

**If the phone is closed**

**From the stand-by screen: press →(音量) ▶ press (音量) to select [EZweb] ▶ press →(音量) ▶ press (音量) to select [①トップメニュー] (①Top Menu) ▶ press →(音量) ▶ select the website you want to view.**

## Using the Camera (Photos/Movie Clips)

●Taking a Photo

**To take a photo: open the lens cover ▶ press (●) to take the photo ▶ press (●) again.**

If you recorded a movie clip the last time you used the camera, Movie mode will be enabled when you open the lens cover. In this case, press (カメラ).

●Recording a Movie Clip

**To record a movie clip: open the lens cover ▶ press (●) to start recording the movie clip ▶ press (●) to stop recording ▶ press (●) again.**

If you took a photo the last time you used the camera, Photo mode will be enabled when you open the lens cover. In this case, press (カメラ).

## Making an International Call

Ex: To call 212-123-△△△△ in the USA

(0)(0)(5)(3)(4)(5) ▶ (1) ▶ (2)(1)(2) ▶ (1)(2)(3) ▶ △△△△ ▶ Press(↗)

- (0)(0)(5)(3)(4)(5): International access code
- (1): Country code (USA)
- (2)(1)(2): Area code
- (1)(2)(3): Phone number you want to call
- △△△△: Phone number you want to call

## English Announcement Function

This function allows you to set the phone so that Voice Mail Service operation instructions and answering messages are played in English.

**From the stand-by screen: press (●) ▶ press (8) ▶ press (1) ▶ press (6) ▶ press (●).**

## Other Handy Features

●Manner Mode

**From the stand-by screen: press and hold (クリア) for more than one second.**

To disable Manner mode, press and hold (クリア) for more than one second from the stand-by screen.

●Setting the Voice Record Function

**From the stand-by screen: press and hold (音量) for more than one second.**

To disable the Voice Record function, press and hold (音量) for more than one second from the stand-by screen.

### For inquiries, please contact

au Customer Service Center (General Information)

●If you are calling from a landline phone: 0077-7-111 (toll free)

●If you are calling from an au mobile phone: 157 (toll free)