au by KDDI

A5502K

A Simple Manual (English Version)

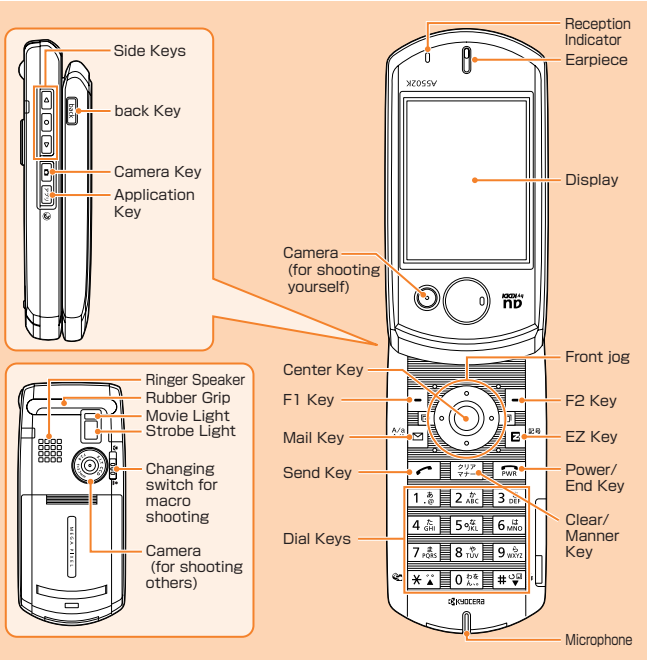

Turning The A5502K On and Off

●Turning the A5502K On

Press and hold [PWR] for more than one second.

●Turning the A5502K Off

Press and hold [PWR] for more than two seconds.

Setting the Date and Time

You can set the phone to display the date and time on the stand-by screen. When this setting is enabled, the A5502K will receive current date and time information for the local service area, and the date and time will be updated accordingly.

From the stand-by screen: press [●] ▶ press [7] ▶ press [1] ▶ press [1].

Checking Your Own Phone Number and E-mail Address

From the stand-by screen: press [●] ▶ press [0].

Making / Answering a Call

●Making a Call

From the stand-by screen: enter the phone number you want to call ▶ press [☎].

To end the call: press [PWR] or close the phone.

●Answering a Call

Press [☎] while the phone is ringing.

To adjust the earpiece volume during a call: press [◎] or [▲]/[▼].

If the phone is closed

Press [▲] or open the phone while it is ringing.

Storing an Entry in the Phone Book / Retrieving a Phone Book Entry

●Storing an Entry

From the stand-by screen: press [−](F1) for more than one second ▶ select the item you want to store ▶ press [●] ▶ enter the data ▶ press [−](F1) [完了].

●Retrieving an Entry

From the stand-by screen: press [−](F1) to display the Heading (hiragana row: a, ka, sa, ta, na, ha, ma, ya, ra, wa, or alphabet/other) Search screen ▶ press [◎] to select the Heading under which the entry is stored ▶ press [◎] to select the appropriate name ▶ press [●] to display the Phone Book Entry details screen.

If the phone is closed

From the stand-by screen: press [▲] ▶ press [▲]/[▼] to select [アドレス帳] (Phone Book) ▶ press [▲] ▶ press [▲]/[▼] to select the Heading under which the entry is stored ▶ press [▲] to display the Name Selection screen ▶ press [▲]/[▼] to select the appropriate name ▶ press [▲] to display the Phone Book Entry details screen.

Setting the E-mail and EZweb Default Settings

Before you can begin using the E-mail and EZweb services, you must set the default settings. When you set the default settings, your E-mail address will be registered, allowing you to send and receive E-mails as well as access the Internet.

From the stand-by screen: press [✉], [E] or [アプリ] ▶ [●] ▶ set the default settings ▶ press [●].

Using E-mail and C-mail

●E-mail

To use the E-mail service, you need to subscribe to the EZweb service. If you did not subscribe it when you purchased your phone, please contact au Customer Service Center or au shop for further information. Make sure that you set the default settings before using the E-mail and EZweb services for the first time. (See “Setting the E-mail/EZweb Default Settings” above.)

• Sending an E-mail Message

From the stand-by screen: press [✉] ▶ press [1] ▶ press [◎] to select the [宛] input field ▶ press [●] ▶ press [●] ▶ enter the recipient’s address ▶ press [●] ▶ press [−](F1) ▶ press [◎] to select the [Sub] input field ▶ press [●] ▶ enter the subject ▶ press [●] ▶ press [◎] to select the [▨] input field ▶ press [●] ▶ enter your message ▶ press [●] ▶ press [−](F1).

• Reading a Received E-mail Message

When you receive an E-mail message, **“新着Eメール X件”** (X New E-mail), where X represents the number of messages received, will be displayed on the stand-by screen.

From the stand-by screen: press [◎] to select [新着Eメール] (New E-mail) ▶ press [●] ▶ press [◎] to select [メインフォルダ] (Main folder) ▶ press [●] ▶ press [◎] to select the e-mail message you want to read ▶ press [●].

●C-mail

Subscribers in the Tokyo and Chubu – incorporating Aichi, Gifu, and Mie prefectures – metropolitan areas do not need to subscribe to use this service. For subscribers located outside of these areas, a separate subscription is required.

• Sending a C-mail Message

From the stand-by screen: press and hold [✉] for more than one second ▶ press [1] ▶ press [◎] to select [宛先未設定] (No destination) ▶ press [●] ▶ enter the recipient’s phone number ▶ press [●] ▶ press [◎] to select [メッセージ未設定] (No message) ▶ press [●] ▶ enter your message ▶ press [−](F1) ▶ press [1].

• Reading a Received C-mail Message

When you receive an C-mail message, **“新着Cメール X件”** (X New C-mail), where X represents the number of messages received, will be displayed on the stand-by screen.

From the stand-by screen: press [◎] to select [新着Cメール] (New C-mail) ▶ press [●] ▶ press [◎] to select the C-mail message you want to read ▶ press [●].

Using EZweb

EZweb is an information service that allows you to enjoy easy Internet access from your mobile phone.

To use the EZweb service, you need to subscribe to the EZweb service. If you did not subscribe it when you purchased your phone, please contact au Customer Service Center or au shop for further information. Make sure that you set the default settings before using the E-mail and EZweb services for the first time. (See “Setting the E-mail/EZweb Default Settings” above.)

From the stand-by screen: press [E] ▶ press [1] ▶ select the website you want to view.

If the phone is closed

From the stand-by screen: press [▲] ▶ press [▲]/[▼] to select [EZweb] ▶ press [▲] ▶ press [▲]/[▼] to select [①トップメニュー] (①Top Menu) ▶ press [▲] ▶ select the website you want to view.

Using the Camera (Movie Clips/Photos)

●Recording a Movie Clip

To record a movie clip: press [📷] for more than one second ▶ press [●] to start recording the movie clip ▶ press [●] to stop recording ▶ press [●] to save the movie.

If the phone is closed

From the stand-by screen: press [📷] for more than one second ▶ press [▲] to start recording the movie clip ▶ press [▲] to stop recording ▶ press [▲] to save the movie.

●Taking a Photo

To take a photo: press [📷] ▶ press [●] to take the photo ▶ press [●] to save the photo.

If the phone is closed

From the stand-by screen: press [📷] ▶ press [▲] to take the photo ▶ press [▲] to save the photo.

Making an International Call

Ex: To call 212-123-△△△△ in the USA

[0+] [0+] [5] [3] [4] [5] ▶ [1] ▶ [2] [1] [2] ▶ [1] [2] [3] ▶ △△△△ ▶ Press [☎]

- [0+] [0+] [5] [3] [4] [5]: International access code
- [1] [2] [1] [2]: Country code (USA) — Area code
- [1] [2] [3] ▶ △△△△: Phone number you want to call

Other Handy Features

●Manner Mode

From the stand-by screen: press and hold [クリアマナー] for more than one second.

To disable Manner mode, press and hold [クリアマナー] for more than one second from the stand-by screen.

●Setting the Voice Record Function

From the stand-by screen: press and hold [−](F2) for more than one second.

To disable the Voice Record function, press and hold [−](F2) for more than one second from the stand-by screen.

For inquiries, please contact

au Customer Service Center (General Information)

●If you are calling from a landline phone: 0077-7-111 (toll free)

●If you are calling from an au mobile phone: 157 (toll free)

Pressing “zero” will connect you to an operator, after calling “157” on your au cellphone.